


VISUAL INDEX

Quickly locate items in the vehicle's interior.


Steering Wheel and Nearby Controls

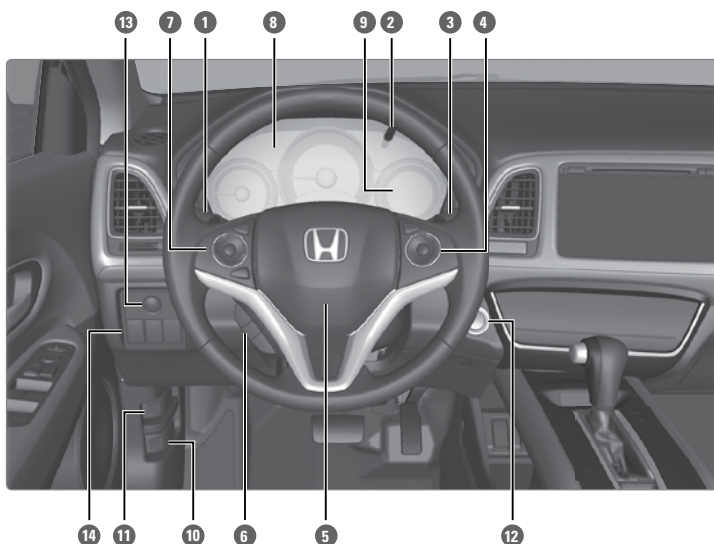

- | | |
|---|---|
| <ul style="list-style-type: none"> ① Lights/turn signals/LaneWatch button* ② SEL/RESET knob*
Brightness control ③ Wipers/washers ④ Cruise control buttons ⑤ Horn ⑥ Bluetooth HandsFreeLink/voice recognition buttons ⑦ Audio controls
MENU button*
Display button* ⑧ Instrument panel | <ul style="list-style-type: none"> ⑨ Information display ⑩ Hood release handle ⑪ Fuel fill door handle ⑫ ENGINE START/STOP button* ⑬ ECON button* ⑭ Vehicle Stability Assist (VSA) OFF button
Lane Departure Warning (LDW) button*
Tire Pressure Monitoring System (TPMS) button*
Forward Collision Warning (FCW) button*
Heated windshield button* |
|---|---|

**if equipped*

Dashboard and Other Controls

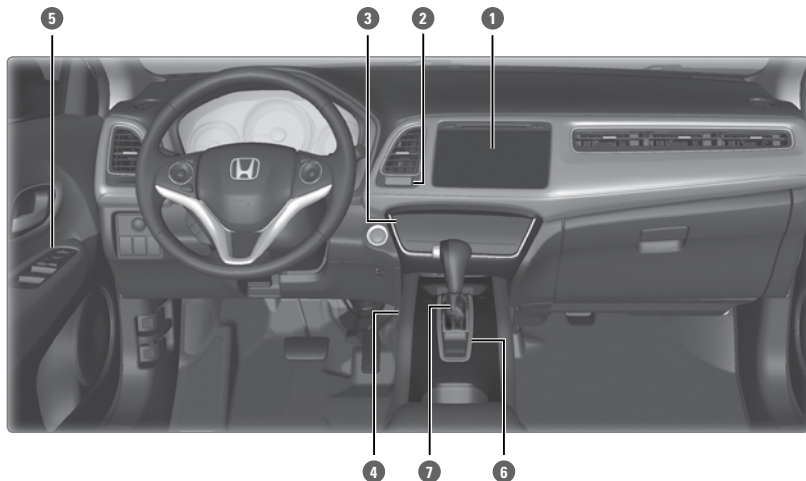


- ① Touchscreen*
- ② Hazard warning button
- ③ Climate control system
 - Seat heater switches*
- ④ USB/HDMI* port
 - Auxiliary input jack*
 - Accessory power socket
- ⑤ Power window switches
 - Door lock switches
 - Door mirror controls
- ⑥ Electric parking brake
 - Brake hold switch
- ⑦ Shift lever*
 - Manual transmission*

**if equipped*

INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.

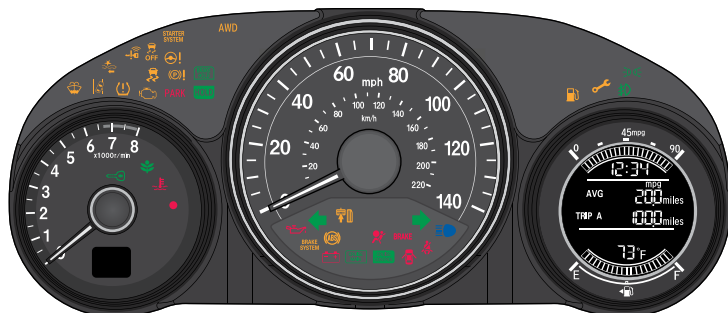

Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.



Brake system

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood. Check the oil level, and add oil if necessary. If the indicator does not turn off, have your vehicle repaired immediately.



Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Smart Entry system*

There is a problem with the smart entry system.

**if equipped*


Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem, or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place, and wait for the engine to cool down.


Anti-lock Brake System (ABS)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.


Tire Pressure Monitoring System (TPMS) *(U.S. models only)*

There is a problem with the tire pressure monitoring system, or the vehicle is fitted with the compact spare tire.


Forward Collision Warning (FCW)* *(Canadian models only)*

There is a problem with the FCW system.


Lane Departure Warning (LDW)* *(Canadian models only)*

There is a problem with the LDW system.


Vehicle Stability Assist (VSA)

There is a problem with the VSA system or hill start assist system.


Brake system

There is a problem with the automatic brake hold system.


Electric parking brake system

There is a problem with the electric parking brake system. Avoid using the parking brake. Have your vehicle inspected immediately.


Electric Power Steering (EPS)

There is a problem with the EPS system. Stop in a safe place, and restart the vehicle.


Starter system*

There is a problem with the starter system.


All Wheel Drive (AWD)*


There is a problem with the AWD system. If the indicator blinks, the system is overheated and inactive. Stop in a safe place, and idle until the indicator goes off.


High temperature

The engine coolant temperature is high. Drive slowly to prevent overheating. If the indicator remains on, immediately stop the vehicle in a safe place.


Low temperature

The engine coolant temperature is low. If the indicator remains on for more than 10 minutes (2–8 minutes is normal), there may be a problem with temperature sensors.

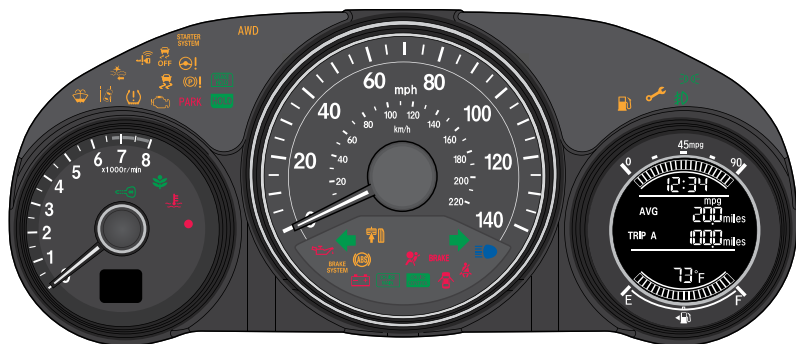

Condition Indicators

These indicators may require you to perform an action.



Seat belt reminder

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



Parking brake

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.



Door/tailgate open

A door or the tailgate is open.



Low fuel

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



Low tire pressure

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. If the indicator remains on after tire inflation, you need to calibrate the system. The indicator also appears if your vehicle is fitted with the compact spare tire. Have your regular tire repaired or replaced as soon as possible.



Lane Departure Warning (LDW)* (Canadian models only)

(Blinks) Take appropriate action to keep the vehicle within the lane.


Washer fluid level *(Canadian models only)*

Washer fluid is low. Refill the reservoir.



CVT models



MT models

Brake depress

- During automatic brake hold operation, the automatic brake hold button is pressed without pressing the brake pedal. Make sure you press the brake pedal.
- (Blinks) Automatic brake hold is canceled during operation. Immediately press the brake pedal.


Forward Collision Warning (FCW)* *(Canadian models only)*

(Blinks) The system detects a likely collision with a vehicle in front of you, and a beep sounds. Take appropriate action to prevent a collision.


Maintenance Minder

Scheduled maintenance for your vehicle is due.


Immobilizer

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off, and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



Exterior lights on



VSA on (blinks)



ECON mode* on



CRUISE MAIN on



Brake hold system on



CRUISE CONTROL on



Brake hold activated



Turn signals/hazards on



FCW* off



Fog lights* on



LDW* off



High beams on




Alarm system set


**if equipped*

Information Display

Consists of several displays that provide you with useful information.

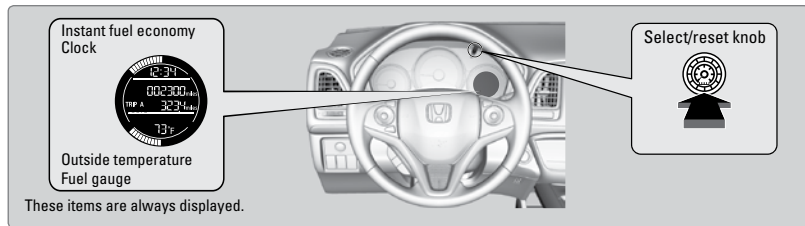

Press the select/reset knob to change information in the center of the display.

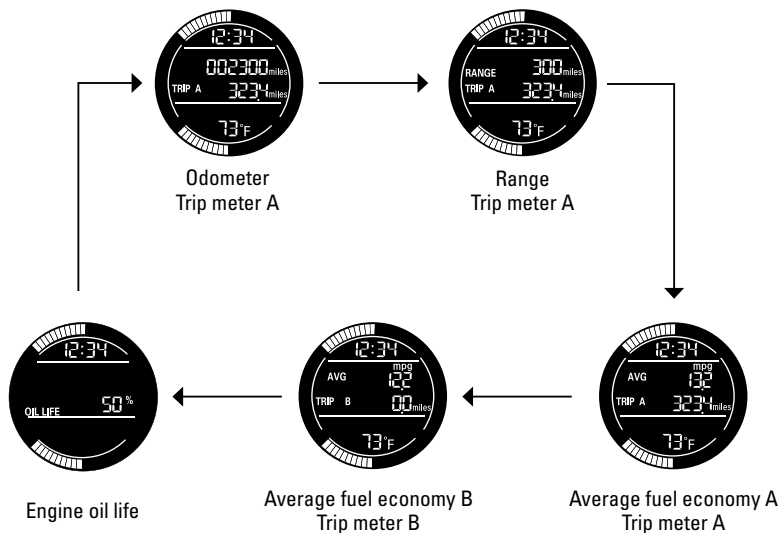

The meter ring illumination in the instrument panel can be changed to a color of your choice. When the vehicle is in the ACCESSORY or OFF mode and the meter ring is illuminated, press the select/reset knob to cycle through various color options.