


Lane Keeping Assist System (LKAS)*



A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 45–90 mph (72–145 km/h).

If you cross a detected lane line without using your turn signal, a message appears on the DII and the steering vibrates slightly.

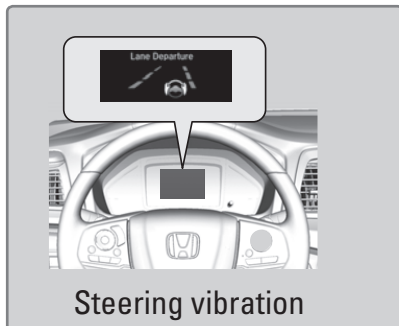

■ Turning LKAS On or Off

1. Press the MAIN button. LKAS appears in the driver information interface (DII).
2. Press the LKAS button. Lane outlines appear in the DII. Dotted turn solid when the system starts operating.

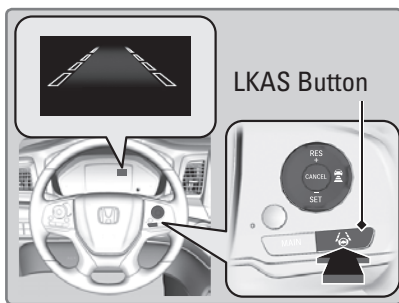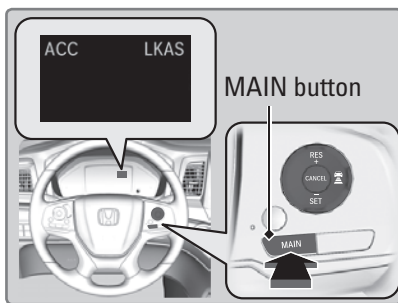

3. Press the MAIN or LKAS turn the system off.



**if equipped*