


Seat Heaters*

Quickly warm the front seats when the vehicle is on. The appropriate indicator appears for each setting.

■ Front Seat Heaters*

Press the seat heater button to cycle through high, low, and off.

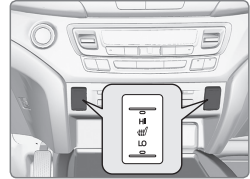

■ Front Seat Heaters and Ventilation*


Press the seat heater or seat ventilation button to cycle through settings. The appropriate indicator (red for heat, blue for ventilation) appears for each setting.

Once - HI setting (three indicators)

Twice - MID setting (two indicators)

Three times - LO setting (one indicator)

Four times - OFF (no indicators)

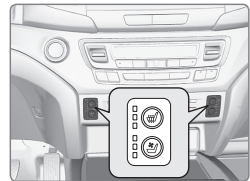

■ Second-Row Outer Seat Heaters*

Press the rear seat heater button to cycle through settings. The appropriate indicator appears for each setting.

Once - HI setting (three indicators)

Twice - MID setting (two indicators)

Three times - LO setting (one indicator)

Four times - OFF (no indicators)



WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.