


Climate Control System

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

■ Front Operation - Climate Control System

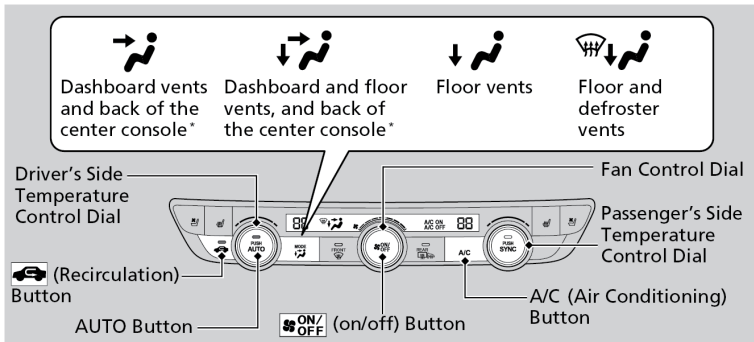


* Not available on all models

■ Heated Windshield Button*4

Turn the vehicle on. Press the heated windshield button to de-ice the windshield.


The heated windshield may automatically activate when the outside temperature is below 4°C, and deactivate when the temperature reaches 6°C.

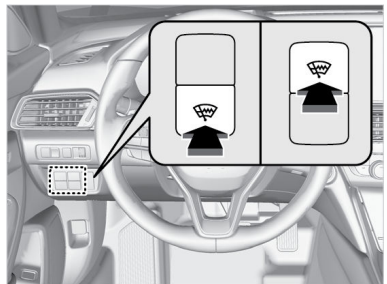

*4 - Canadian models only, if equipped

■ Heated Steering Wheel*4

Press the button to heat the steering wheel when the vehicle is on. Press the button again to turn off the heating.

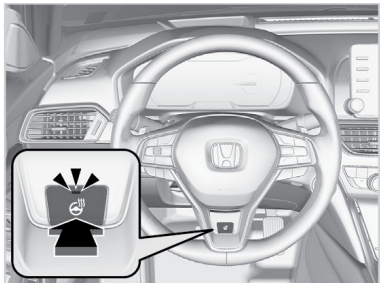

**4 - Canadian models only, if equipped*