

■ Electric Parking Brake

Keep the vehicle from moving when it is parked.

To apply



The electric parking brake can be applied any time the vehicle has battery, no matter which position the ignition switch*¹ is in.

Pull the electric parking brake switch up gently and securely.

To release

The ignition switch must be ON*¹ in order to release the electric parking brake.

1. Depress the brake pedal.
2. Press the electric parking brake switch.

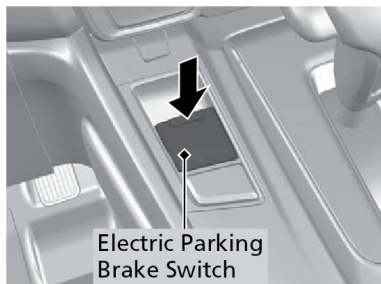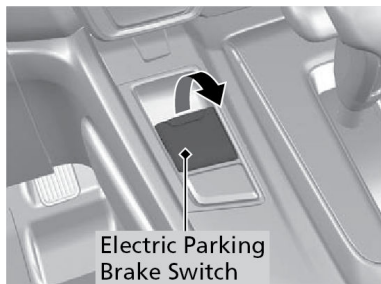

■ Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

**1 - If equipped*

 
Turning on the system



Automatic Brake Hold Button




Activating the system




Brake Pedal



 Canceling the system



Accelerator Pedal

 

Fasten your seat belt properly, then start the engine. Press the automatic brake hold button.

- The automatic brake hold system indicator comes on. The system is turned on.

Depress the brake pedal to come to a complete stop. The shift lever must not be in P or R .

- The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes. Release the brake pedal after the automatic brake hold indicator comes on.

Depress the accelerator pedal while the shift lever is in a position other than P or R . The brake hold is disengaged and the vehicle starts to move.

- The automatic brake hold indicator goes off. The system releases the brake automatically.

To turn off brake hold: While the system is on, press the automatic brake hold button again. The automatic brake hold system indicator goes off.

If you want to turn off automatic brake hold while the system is in operation, press the automatic brake hold button with the brake pedal depressed.