


## Maintenance Minder™


When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

### Models with Information Display

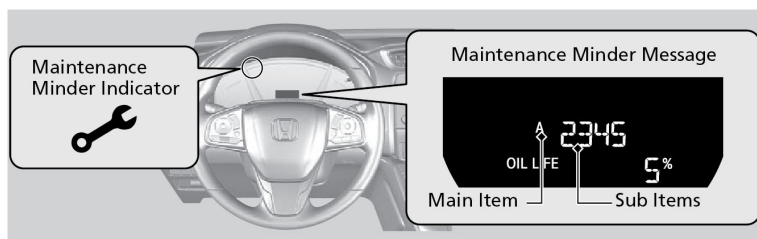

1. Turn the ignition switch to ON.
2. Press the TRIP knob repeatedly until the engine oil life appears on the information display.

### Models with Driver Information Interface

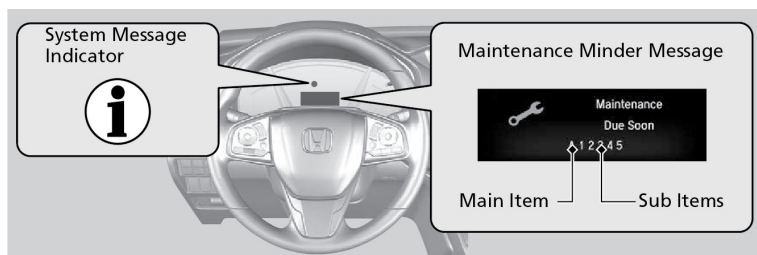

1. Set the power mode to ON.
  2. Press the Display/Information (i) button several times until the wrench symbol is displayed.
  3. Press ENTER to go to the Maintenance Minder screen. The engine oil life appears on the driver information interface along with maintenance items due soon.
- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.

## MAINTENANCE

---

- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

### Canadian Models

- Independent of the Maintenance Minder information, adjust the valves during services A, 0, 9, 1, 2, or 3 if they are noisy.

**Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the .

### ■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

### U.S. Models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"> <li>• Replace engine oil*<sup>1</sup></li> </ul>
B	<ul style="list-style-type: none"> <li>• Replace engine oil*<sup>1</sup> and oil filter</li> <li>• Inspect front and rear brakes</li> <li>• Inspect these items:               <ul style="list-style-type: none"> <li>• Tie rod ends, steering gearbox, and boots</li> <li>• Suspension components</li> <li>• Driveshaft boots</li> <li>• Brake hoses and lines (including ABS/VSA®)</li> <li>• All fluid levels and condition of fluids</li> <li>• Exhaust system<sup>#</sup></li> <li>• Fuel lines and connections<sup>#</sup></li> </ul> </li> </ul>

\*1: If a Maintenance Minder indicator does not appear more than 12 months after the display is reset, change the engine oil every year.

\*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

\*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

#: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> <li>• Rotate tires</li> </ul>
2	<ul style="list-style-type: none"> <li>• Replace air cleaner element *<sup>2</sup></li> <li>• Replace dust and pollen filter *<sup>3</sup></li> <li>• Inspect drive belt</li> </ul>
3	<ul style="list-style-type: none"> <li>• Replace transmission fluid *<sup>4</sup></li> </ul>
4	<ul style="list-style-type: none"> <li>• Replace spark plugs</li> <li>• Inspect valve clearance</li> </ul>
5	<ul style="list-style-type: none"> <li>• Replace engine coolant</li> </ul>
6	<ul style="list-style-type: none"> <li>• Replace rear differential fluid</li> </ul>
7	<ul style="list-style-type: none"> <li>• Replace brake fluid *<sup>5</sup></li> </ul>

\*4: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).

\*5: If a Maintenance Minder Indicator does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

## Canadian Models

CODE	Maintenance Main Items
------	------------------------

A	<ul style="list-style-type: none"><li>• Replace engine oil *1</li></ul>
---	---

0	<ul style="list-style-type: none"><li>• Replace engine oil *1 and oil filter</li></ul>
---	--

\*1: If a Maintenance Minder indicator does not appear more than 12 months after the display is reset, change the engine oil every year.

\*2: If you drive in dusty conditions, replace the air cleaner element every 24,000 km (15,000 miles).

\*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 24,000 km (15,000 miles).

\*4: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 40,000 km (25,000 miles).

\*5: If a Maintenance Minder Indicator does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

#: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
------	-----------------------

1	<ul style="list-style-type: none"><li>• Rotate tires</li></ul>
---	--

2	<ul style="list-style-type: none"><li>• Replace air cleaner element*2</li><li>• Replace dust and pollen filter*3</li><li>• Inspect drive belt</li></ul>
---	---

3	<ul style="list-style-type: none"><li>• Replace transmission fluid*4</li></ul>
---	--

4	<ul style="list-style-type: none"><li>• Replace spark plugs</li><li>• Inspect valve clearance</li></ul>
---	---

5	<ul style="list-style-type: none"><li>• Replace engine coolant</li></ul>
---	--

6	<ul style="list-style-type: none"><li>• Replace rear differential fluid</li></ul>
---	---

7	<ul style="list-style-type: none"><li>• Replace brake fluid*5</li></ul>
---	---

9	<ul style="list-style-type: none"><li>• Inspect front and rear brakes</li><li>• Inspect these items:<ul style="list-style-type: none"><li>• Tie rod ends, steering gearbox, and boots</li><li>• Suspension components</li><li>• Driveshaft boots</li><li>• Brake hoses and lines (including ABS/VSA®)</li><li>• All fluid levels and condition of fluids</li><li>• Exhaust system#</li><li>• Fuel lines and connections#</li></ul></li></ul>
---	--