

■ Electric Parking Brake

Keep the vehicle from moving when it is parked.

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.

To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the ignition switch*¹ is in.

Pull the electric parking brake switch up gently and securely.



- The indicator in the switch comes on.
- The parking brake and brake system indicator (red) comes on.

To release

The ignition switch must be ON*¹ in order to release the electric parking brake.




1. Depress the brake pedal.
2. Press the electric parking brake switch.
 - The indicator in the switch goes off.
 - The parking brake and brake system indicator (red) goes off.

■ Automatic Brake Hold

Continuously Variable Transmission models

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

**1 - If equipped*

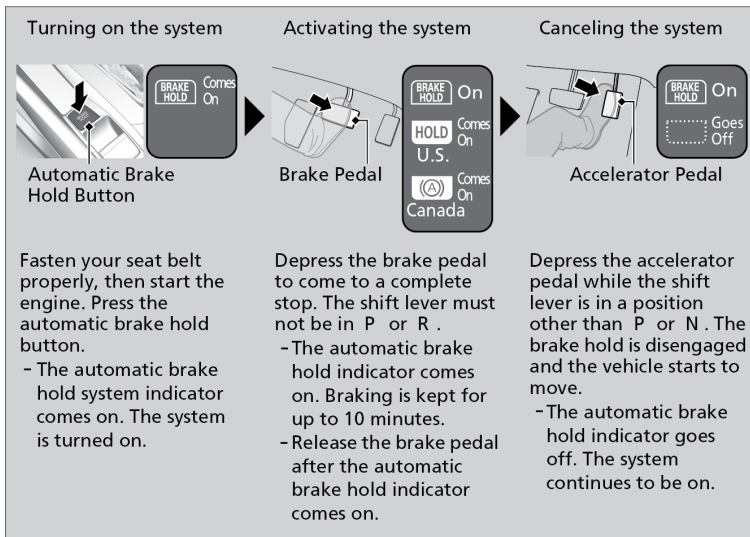

Manual Transmission models

Keeps the brake applied after releasing the brake pedal until you change a gear to a position other than Neutral (N) and:

- Release the clutch pedal on a level road or when facing downhill.
- Release the clutch pedal and depress the accelerator pedal when facing uphill.

You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

Turning on the system



 
Automatic Brake Hold Button



Fasten your seat belt properly, then start the engine. Press the automatic brake hold button.

The automatic brake hold system indicator comes on. The system is turned on.

Activating the system



Brake Pedal

 


Depress the brake pedal to come to a complete stop.

The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes. Release the brake pedal after the automatic brake hold indicator comes on.

Canceling the system

Clutch Pedal



Accelerator Pedal



Shift into one of the gears other than N and:

Release the clutch pedal on a level road or when facing downhill.
Release the clutch pedal and depress the accelerator pedal when facing uphill.

The system is canceled and the vehicle starts to move.

The automatic brake hold indicator goes off. The system continues to be on.