

SMS Text Messaging and E-Mail*1

Certain phones can receive and send text messages and e-mails while paired and linked. Standard message rates apply. This feature is limited while the vehicle is moving. Visit handsfreelink.com (US) (U.S.) to check phone compatibility. Canada customers can phone (855)-490-7351 for any HandsFreeLink® related inquiry.

1. A pop-up appears and notifies you of a new text message.
2. Select Read to listen to the message.
The text message is displayed. The system automatically starts reading out the message.
3. To discontinue the message read-out, select Stop.



**1 - If equipped*