

## ■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.


### Models with Color Audio

1. Press the **Display/Information** button, then Select **Vehicle Settings**.
2. Select **Door Setup**.
3. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

## Customized Features

When you customize settings, make sure that the vehicle is at a complete stop and shift to Park (P).

### Models with Color Audio

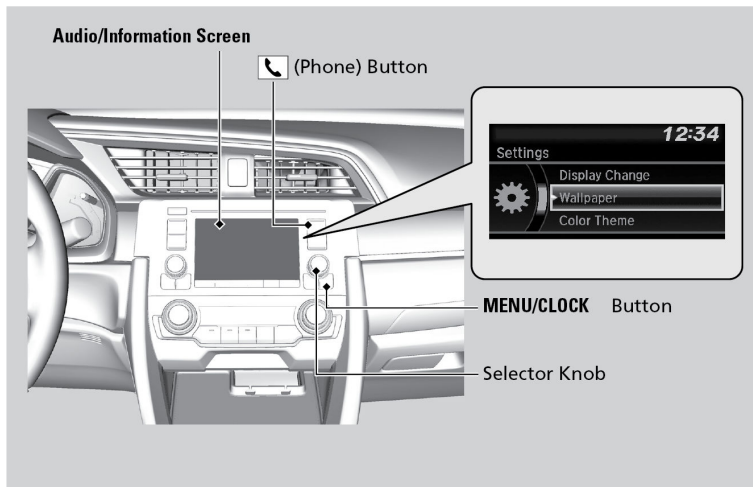

### ■ How to Change a Setting

#### Models with Color Audio

1. From the **HOME** screen, select **Settings**.
2. Select a category.

## VEHICLE CONTROLS

---

3. Select a setting option and make your preferred changes.
4. Press the button to exit the menus.

### Setting the Clock

On vehicles with navigation, the time is automatically set using GPS signals. On vehicles without navigation and if the Automatic Date & Time feature has been turned off, use the following steps to adjust the time in the clock display.

#### Models with Color Audio

1. Press and hold the **MENU/CLOCK** button.
2. Rotate knob to change the hour, then press the selector knob.
3. Rotate knob to change the minute, then press the selector knob.
4. To enter the selection, rotate knob, select **Set**, then press the selector knob.

