


## Dashboard and Nearby Controls

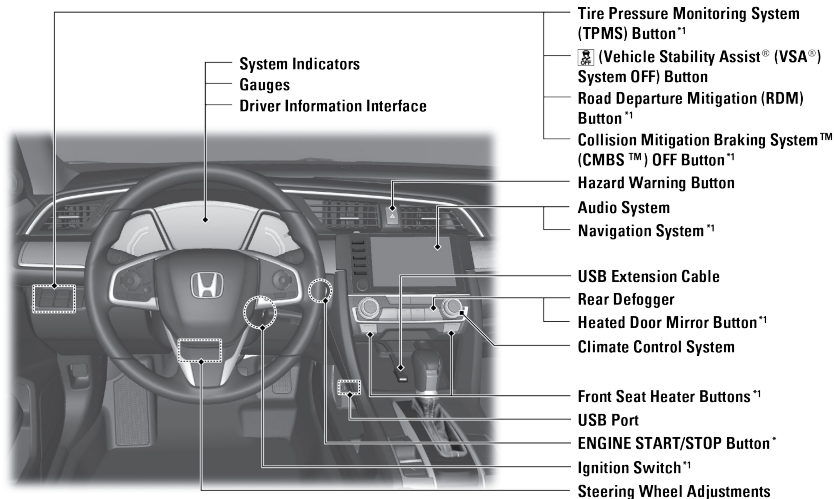

\*: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

*\*1 - If equipped*

# INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

## Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

**BRAKE**  
U.S.



Canada

### Brake system

- Brake fluid is low.
  - There is a malfunction in the brake system.
- Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



### Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood, check the oil level and add oil if necessary. If the indicator does not turn off, have your vehicle repaired immediately.



### 12-Volt Battery Charging system

The 12-volt battery is not charging. Turn all electrical items off, but do not turn the vehicle off to prevent further battery discharge. Have your vehicle repaired immediately.



### Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



### Smart Entry System\*<sup>1</sup>

There is a problem with the system.

## LKAS

### Lane Keeping Assist System (LKAS)

There is a problem with the system.



### Malfunction Indication Lamp (check engine light)

The emissions control system may have a problem, or the fuel cap is missing or loose. If the indicator blinks, a misfire in the engine's cylinders is detected. Stop in a safe place and wait for the engine to cool down.



### Anti-lock Brake System (ABS)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



### Low Tire Pressure / Tire Pressure Monitoring System (TPMS)

- Blinks and remains on:  
Have your vehicle checked by a dealer. If the vehicle is fitted with a compact spare, get your regular tire repaired or replaced and put back on your vehicle as soon as you can.



### Vehicle Stability Assist<sup>®</sup> (VSA<sup>®</sup>) System

There is a problem with the VSA<sup>®</sup> or hill start assist system.



### Collision Mitigation Braking System<sup>™</sup> (CMBS<sup>™</sup>)

There is a problem with the system, the temperature inside the camera is too high or the camera or sensor is blocked.



### Road Departure Mitigation (RDM)

There is a problem with the system, the temperature inside the camera is too high, or the camera is blocked.



### Electric Power Steering (EPS)

There is a problem with the system. Stop the vehicle in a safe place, and restart the engine.

## ACC

### Adaptive Cruise Control (ACC)\*<sup>1</sup>

There is a problem with the system.

## Condition Indicators

These indicators may require you to perform an action.

**BRAKE**  
U.S.

Canada

**Parking Brake**

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.

**Seat Belt Reminder**

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.

**Low Fuel**

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.

**Low Tire Pressure / Tire Pressure Monitoring System (TPMS)**

- Comes on while driving:

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary.

**System Message**

When a condition or malfunction indicator comes on, a message also appears on the driver information interface (DII). Check the display for more information.

**Immobilizer**

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off, and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

**On/Off Indicators**

These indicators remind you when an item is on or off.

**VSA® off****LKAS** LKAS on**VSA® engaged (blinks)****ACC** ACC\*1 on

## INSTRUMENT PANEL

---



**Turn signals/hazards on**



**Fog lights\*<sup>1</sup> on**



**High beams on**



**Exterior lights on**



**Auto High Beam System on**



**ECON mode\*<sup>1</sup> on**

*\*1 - If equipped*