

■ Electric Parking Brake

Keep the vehicle from moving when it is parked.


Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.

To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the ignition switch*¹ is in.


Pull the electric parking brake switch up gently and securely.

The parking brake and brake system indicator (red) comes on.

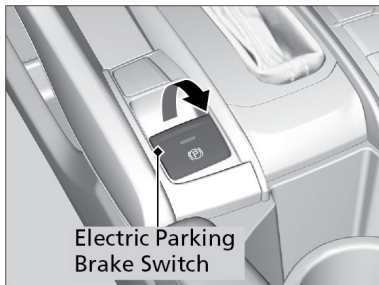

To release

1. The ignition switch must be ON*¹ in order to release the electric parking brake.
2. Depress the brake pedal.
3. Press the electric parking brake switch.

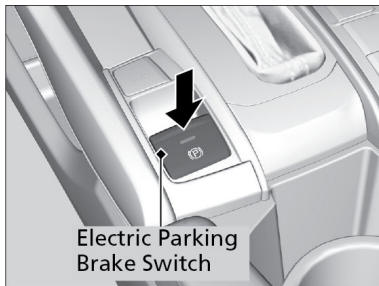

**1 - If equipped*