


Driving Position Memory System

You can store two driver's seat positions with the driving position memory system.


When you unlock and open the driver's door with a remote transmitter, or smart entry system, the seat adjusts automatically to one of the two preset positions.

- DRIVER 1 transmitter is linked to memory button 1.
- DRIVER 2 transmitter is linked to memory button 2.

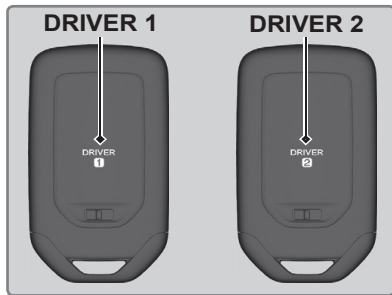

You can use the buttons on the driver's door to store two driver's seat positions into memory when the vehicle is on.

1. Adjust the seat to your preferred position.
2. Press SET.
3. Press and hold memory button 1 or 2. The indicator will illuminate for the button pressed once the seat position has been memorized.
4. Press one of the memory buttons to recall previously stored positions.

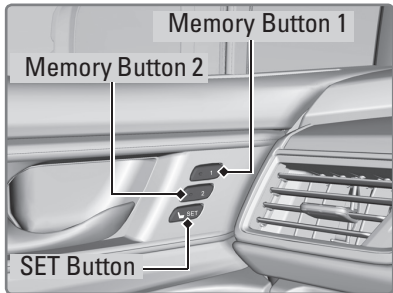

When you unlock and open the driver's door with a remote transmitter, the seat adjusts automatically to one of the two preset positions, depending on which keyless remote is present.