


Customized Features

Use the Settings menu to customize certain features when the vehicle is stopped.

Select items on the touchscreen to make selections.

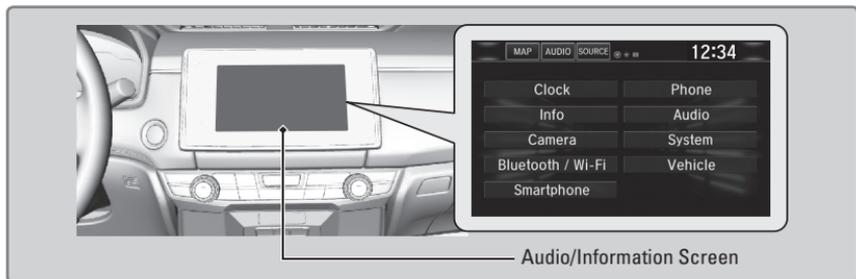

1. From the HOME screen, select Settings.
2. Select an option and make your preferred changes.
3. Press BACK or Home to exit the menus.

■ Customization Example: Door Lock/Unlock Settings

To customize the door lock/unlock settings, follow the steps below when the vehicle is stopped and the power mode is ON. Use the audio/information screen.


1. Press HOME.
2. Press Settings.
3. Press Vehicle.
4. Press Door/Window Setup.
 - To customize door lock settings, press Auto Door Lock
 - To customize door unlock settings, press Auto Door Unlock
5. Choose a setting.
 - The default lock setting is Shift from Park
 - The default unlock setting is All Doors when Driver's Door Opens
 - Press the BACK or HOME button when you are done

Driving Position Memory System

You can store two driver's seat positions with the driving position memory system.


When you unlock and open the driver's door with a remote transmitter, or smart entry system, the seat adjusts automatically to one of the two preset positions.

- DRIVER 1 transmitter is linked to memory button 1.
- DRIVER 2 transmitter is linked to memory button 2.

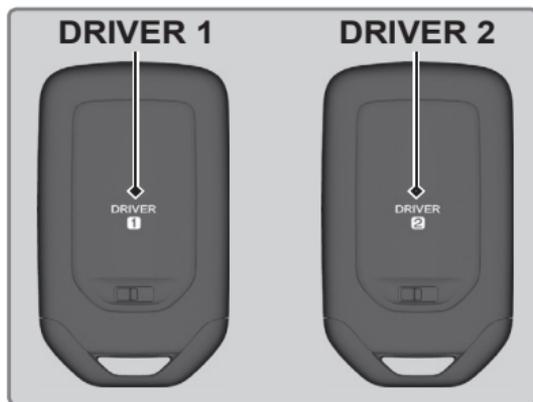

You can use the buttons on the driver's door to store two driver's seat positions into memory when the vehicle is on.

1. Adjust the seat to your preferred position.
2. Press SET.
3. Press and hold memory button 1 or 2. The indicator will illuminate for the button pressed once the seat position has been memorized.
4. Press one of the memory buttons to recall previously stored positions.

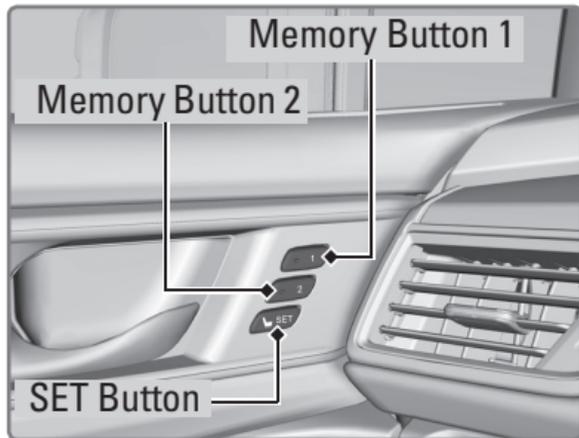

When you unlock and open the driver's door with a remote transmitter, the seat adjusts automatically to one of the two preset positions, depending on which keyless remote is present.