


# INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.

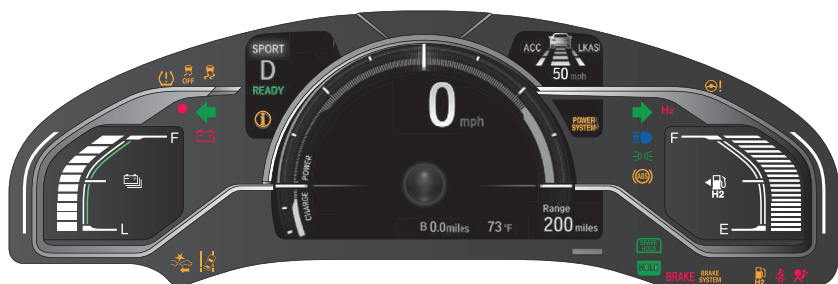

Indicators briefly appear with each power system start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

## Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your authorized Honda Clarity Fuel Cell dealer if necessary.

### **BRAKE**

#### **Brake system**

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. Have your vehicle repaired immediately.



#### **Charging system**

The 12-volt battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



#### **Supplemental Restraint System (SRS)**

There is a problem with one of the airbag systems or seat belt tensioners. Have your vehicle repaired immediately.

### **H<sub>2</sub>**

#### **Hydrogen leak indicator**

There is a problem with the hydrogen system. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.



### **Anti-lock Brake System (ABS)**

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



### **Tire Pressure Monitoring System (TPMS)**

(Blinks for one minute, then stays on) There is a problem with the tire pressure monitoring system.



### **Collision Mitigation Braking System™ (CMBS™)**

There is a problem with the system, the temperature is too high, or the camera is blocked.



### **Vehicle Stability Assist® (VSA®)**

There is a problem with the VSA system.



### **Brake system**

There is a problem with the hybrid brake system.



### **Electric Power Steering (EPS)**

There is a problem with the EPS system.



### **Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)**

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.



### **Lane Keeping Assist System (LKAS)**

There is a problem with the system, the camera is blocked, or the system automatically canceled.



### **Road Departure Mitigation (RDM)**

There is a problem with the system.

## Condition Indicators

These indicators may require you to perform an action.

**BRAKE**

### Parking brake

The brake fluid is low, the parking brake is applied, or there is a problem with the brake system.



### Seat belt reminder

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your authorized Honda Clarity Fuel Cell dealer.



### Low fuel

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge.



### Low tire pressure

Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary. The indicator also appears if your vehicle is fitted with the compact spare tire. Have your regular tire repaired or replaced as soon as possible.



### System message

When a condition or malfunction indicator comes on, a message also appears on the driver information interface. Check the display for more information.

**READY**

### Ready

The vehicle is ready to drive.



### Immobilizer System

Your smart entry remote cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your authorized Honda Clarity Fuel Cell dealer.

**POWER SYSTEM**

### Power System

There is a problem with the power system. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

## On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



High beams on



VSA engaged (blinking)



Exterior lights on



CMBS off

SPORT

SPORT mode on



Turn signals/hazards on