


Maintenance Minder™

Reminds you when indicated maintenance service is due.

When maintenance is due, the system message indicator comes on and a message appears on the driver information interface every time you turn the vehicle on. Press either Info button (◀/▶) on the steering wheel to change displays.

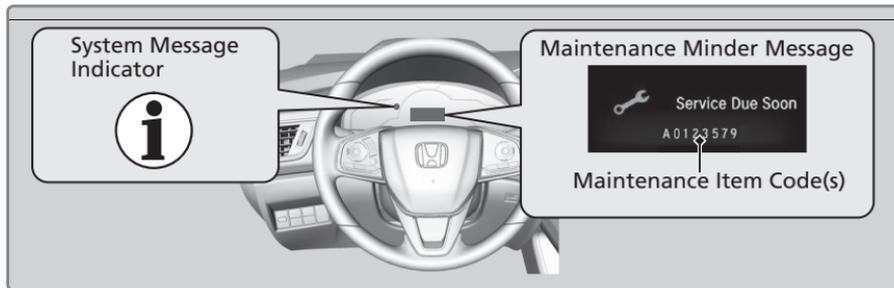

- At each maintenance interval, check the Fuel Cell insulating fluid level. Top up to the Max fill line as needed, using 20% diluted FC insulating fluid.
- Every 15 years, replace the hydrogen tank, ventilation drain, and duct.

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the driver information interface.

Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Items
A	<ul style="list-style-type: none"> • Replace ion exchange filter
0	<ul style="list-style-type: none"> • Inspect front and rear brakes • Check expiry date for Temporary Tire Repair Kit • Inspect these items: <ul style="list-style-type: none"> • Tie rod ends, steering gear box, and boots • Suspension components • Driveshaft boots • Brake hoses and lines (including ABS/VSA) • All fluid levels and condition of fluids • Stay RR, RR Subframe • Exhaust Diluter
1	<ul style="list-style-type: none"> • Rotate tires
2	<ul style="list-style-type: none"> • Replace dust and pollen filter*¹
3	<ul style="list-style-type: none"> • Replace transmission fluid*²
5	<ul style="list-style-type: none"> • Replace Fuel Cell Insulating Fluid - 50% prediluted formulation*³
7	<ul style="list-style-type: none"> • Replace brake fluid*⁴ • Replace air cleaner element*⁴
9	<ul style="list-style-type: none"> • Inspect these items: <ul style="list-style-type: none"> • Hydrogen tank • Hydrogen ventilation duct and drain • Exhaust system • Fuel lines and connections

*1: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles.

*2: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 31,250 miles.

*3: If a Maintenance Minder message does not appear more than 12 year after the display for item 5 is reset, change Fuel Cell Insulating Fluid with "Fuel Cell Insulating Fluid - 50% prediluted formulation" every 12 years.

*4: If a Maintenance Minder message does not appear more than 3 years after the display for item 7 is reset, change the brake fluid and replace air cleaner element every 3 years.