


Driving Position Memory System*

You can store two driver's seat positions into memory when the power mode is on using the buttons on the driver's door.

1. Adjust the seat to your preferred position.
2. Press SET. A beep will sound and the memory indicator light will blink.
3. Press and hold memory button 1 or 2. The indicator will illuminate for the button pressed once the seat position has been memorized and you will hear two beeps.
4. Press one of the memory buttons to recall previously stored positions.

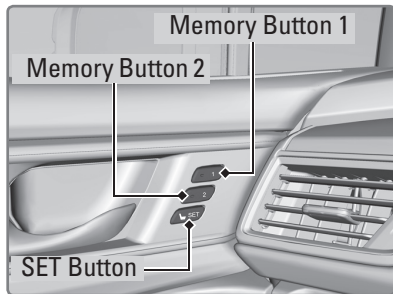

When you unlock and open the driver's door with a remote transmitter, the seat adjusts automatically to one of the two preset positions, depending on which keyless remote is present.