

### ■ Exterior Lights

Rotate the switch on the headlight lever to operate the exterior lights.

**OFF:** All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

**AUTO:** Headlights turn on or off depending on ambient brightness when the power mode is on. Headlights automatically come on after the wipers are engaged for a certain time.

☞☉: Turn on all exterior lights including headlights.

The instrument panel brightness does not change when the headlights come on.

