


## Remote Climate Control

Start the climate control system using the remote transmitter before you enter the vehicle.

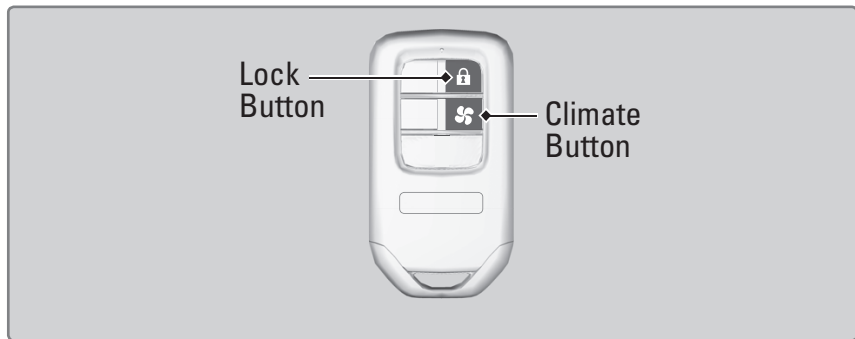

### ■ Turn On the Climate Control System

Press the Lock button, then press and hold the climate button within 5 seconds.

### ■ Turn Off the Climate Control System

Press and hold the climate button.