


# VISUAL INDEX


Quickly locate items in the vehicle's interior.

## Steering Wheel and Nearby Controls

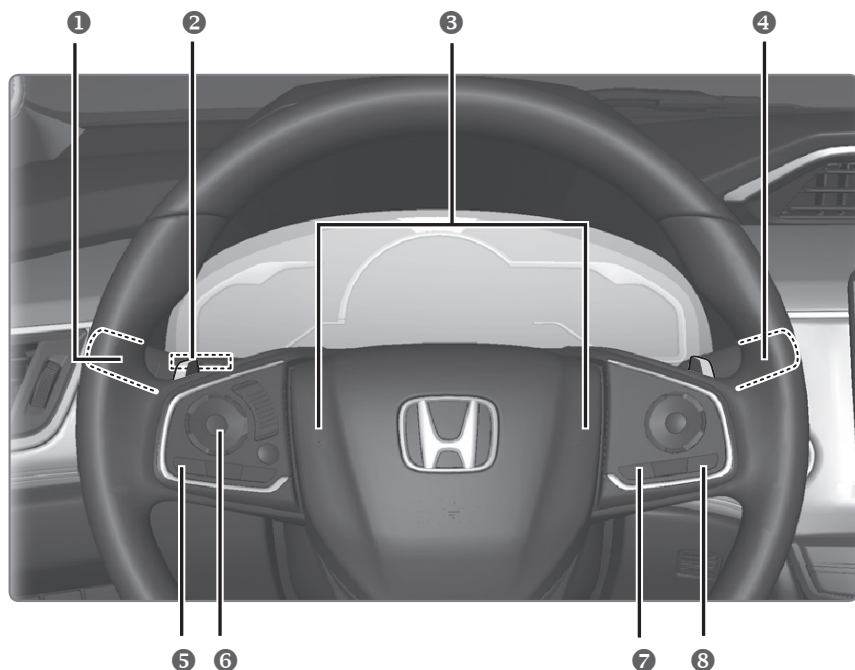

- |   |   |
|---|---|
| ① Lights/turn signals<br>LaneWatch™ button                      | ⑥ Display/Information button<br>Audio controls                            |
| ② Brightness control<br>TRIP button                             | ⑦ Adaptive Cruise Control (ACC)<br>with Low Speed Follow (LSF)<br>buttons |
| ③ Horn  | Lane Keep Assist System<br>(LKAS) button                                  |
| ④ Wipers/washers  | ⑧ Interval Button   |
| ⑤ Voice controls<br><i>Bluetooth®</i> HandsFreeLink®<br>buttons |   |


## Steering Wheel and Nearby Controls (continued)

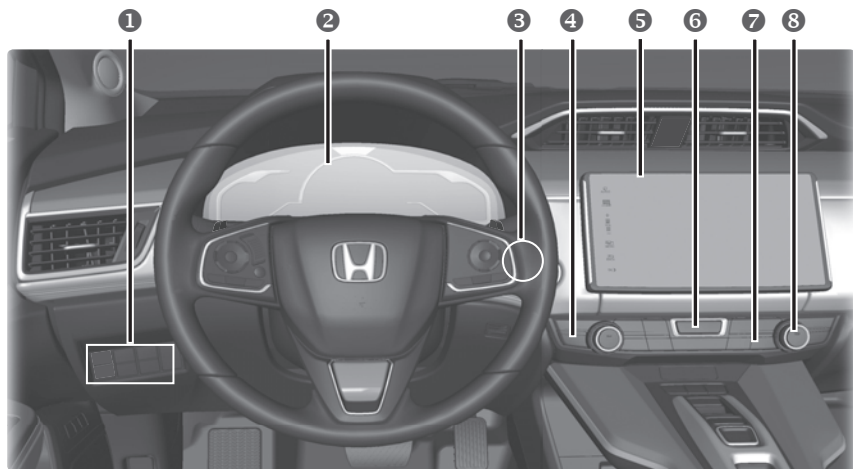

- |   |   |
|---|---|
| <p>① Vehicle Stability Assist (VSA®) system OFF button<br/>Road Departure Mitigation (RDM) button<br/>Collision Mitigation Braking System™ (CMBS™) OFF button<br/>Charge lid release button<br/>Acoustic Vehicle Alerting System OFF button*</p> <p>② Instrument panel<br/>Driver information interface</p> | <p>③ POWER button</p> <p>④ Seat Heater Buttons</p> <p>⑤ Navigation system<br/>Audio system</p> <p>⑥ Hazard Warning Button</p> <p>⑦ Heated door mirror<br/>Rear window defogger button</p> <p>⑧ Climate control system</p> |
|---|---|

*\* if equipped*

## Dashboard and Other Controls

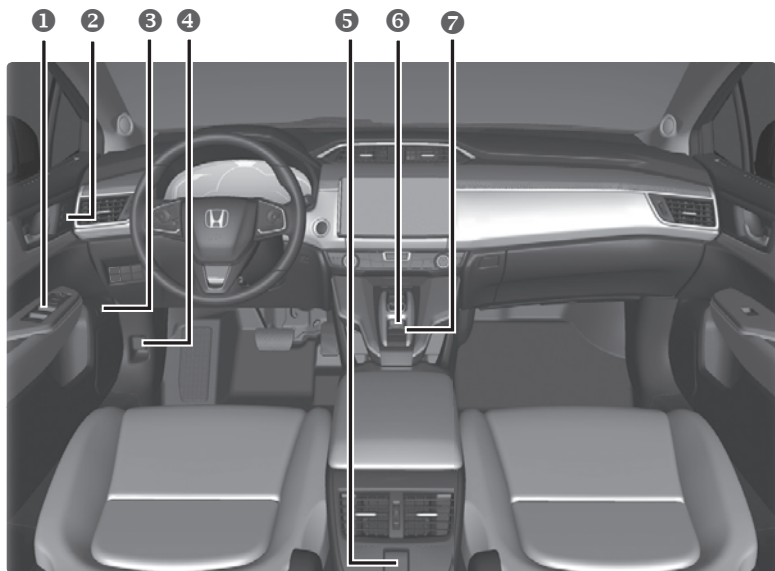

- ① Power window switches  
Door lock switches  
Door mirror controls
- ② Memory buttons\*
- ③ Trunk opener  
Fuel fill door release button
- ④ Hood release handle
- ⑤ Accessory power socket


- ⑥ SPORT button  
ECON button  
HV button
- ⑦ Electric Parking Brake Switch  
Automatic brake hold button  
Shift Button  
Electronic gear selector

*\*if equipped*

## Driver Information Interface (DII)


Consists of several displays that provide you with useful information.

Press the Display/Information button  
see the current display.

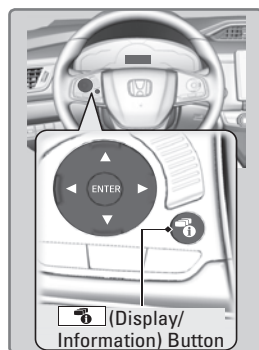

### Main Displays


Press ◀ or ▶ button to cycle through the displays shown below. Press ENTER to see detailed information.

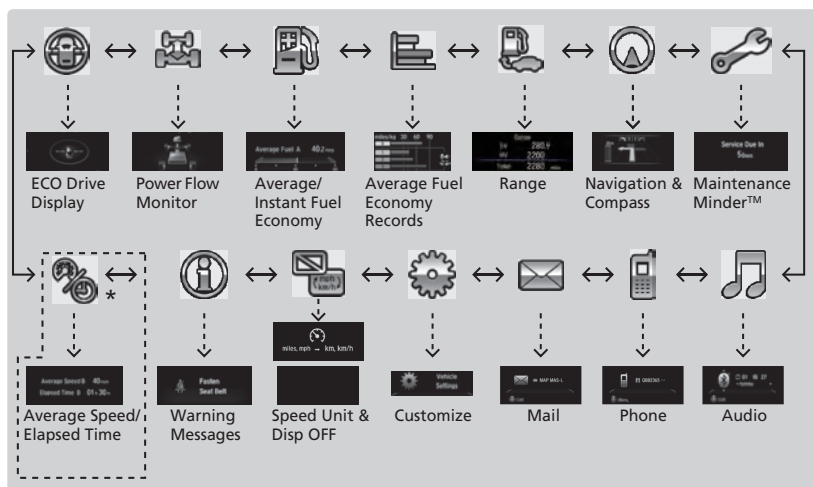

*\*You can add content using the audio/information screen.*

## ■ Lower Displays

Press the TRIP button to cycle through the displays shown below:

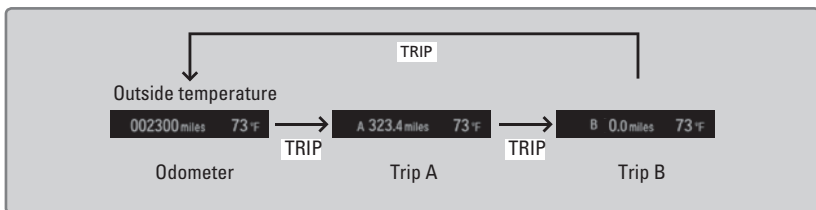


## ■ Energy Flow Monitor

Displays the energy flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

### Energy Flow


Engine on

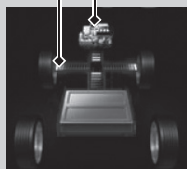

#### Hybrid (HV)

Power is supplied by the motor and the engine.

Engine off

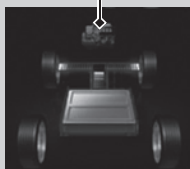

#### Electric Vehicle (EV)

Power is supplied by the motor.



#### Engine

Power is being supplied to the wheels and to charge the High Voltage battery.



#### Regeneration

The motor is charging the High Voltage battery.



Power is supplied only by the engine.



The engine is running and the motor is charging the High Voltage battery.

## ■ Audio Remote Controls


You can operate certain functions of the audio system using the steering wheel controls.

**📶 button:** Press until the audio screen is displayed in the Driver Information Interface.

**+ / - bar:** Press the ends of the bar to adjust audio volume.

**ENTER button:** Make audio selections in the Driver Information Interface.

**📶 ➡ button:** Go back to the previous command or cancel a command.

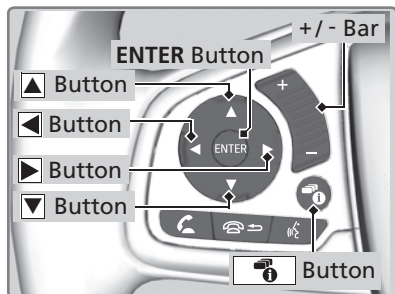

◀ / ▶ buttons: Change presets, tracks, albums, or folders.

From the audio screen in the Driver Information Interface:

### FM/AM/SiriusXM® Radio\*

Press ◀ or ▶ for the next or previous preset station.

Press and hold ◀ or ▶ to seek the next or previous strong station.

### iPod®/USB/Bluetooth® Audio

Press ◀ or ▶ for the next or previous track.

Press and hold ◀ or ▶ for the next or previous folder (USB).

### Pandora®

Press ▶ for the next song.

Press and hold ◀ or ▶ for the previous or next station.

*\*if equipped*

# BLUETOOTH® HANDSFREELINK® (HFL)

## Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [automobiles.honda.com/handsfreelink](http://automobiles.honda.com/handsfreelink) (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.**


### ■ HFL Controls

Use the controls to enter information and make selections.

**Hang-Up/Back button:** End or decline a call, go back to the previous command, or cancel an operation.

**Pick-Up button:** Go to the phone menu or answer an incoming call.

**Talk button:** Access the Voice Portal.

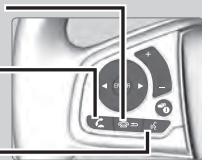


**☎ button:** Select the phone screen icon, then press ENTER to view the phone menu in the Driver Information Interface.

**▲ / ▼ buttons:** Select an item in the phone menu in the Driver Information Interface.

**ENTER button:** Call a number listed in Speed Dial, Call History, or Phonebook menus in the driver information interface.

### ■ Steering Wheel Controls

Use the steering wheel controls to say voice commands.

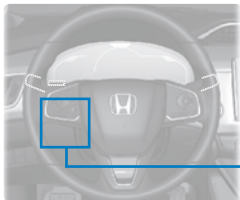

**Back button:** Press to cancel a command or operation.

**Talk button:** Press to say navigation commands.