

Adjusting the Rear Seats

Pull the release lever on the left or right side to change the angle of the seat back.

