


VEHICLE CONTROLS

Wiper Operation

The windshield wipers and washers can be used when the vehicle is on.

■ Front Wipers


Move the wiper lever up or down to the desired position.

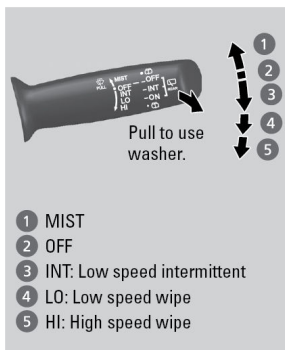

■ Intermittent (INT) Wipers*1

When you move the lever to the INT position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

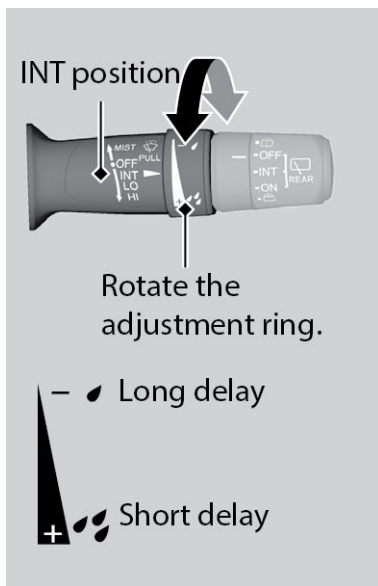

*1 - If equipped