

■ Electronic Gear Selector*1

Select the vehicle's gear using a simple button interface. Apply the brake pedal and select a gear.

Park (P): Used for parking or starting. Press P with the brake pedal pressed. A red indicator appears.

Reverse (R): Pull back the (R) button to put the vehicle in Reverse.

Neutral (N): Press the (N) button to put the vehicle in Neutral.

Drive /S Position(D/S): Used for normal driving (D) or driving in Sport mode (S). Press D/S once for normal driving. Press D/S twice for Sport mode driving. A green indicator appears. Make sure the electric parking brake is released.



⚠ WARNING

The vehicle can roll away if left unattended without confirming that Park (P) is engaged. Always keep your foot on the brake pedal until you have confirmed that (P) is shown on the gear position indicator.

NOTICE

When you change from D to R and vice versa, or want to change to Park (P), come to a complete stop and keep the brake pedal applied. Operating the gear buttons before the vehicle has come to a complete standstill can damage the transmission.

Auto park mode

For your convenience, Park (P) is automatically engaged when the vehicle is turned off, or when all of the following conditions are met: the vehicle is stopped with the engine running, the driver's seat belt is unbuckled, and the driver's door is opened. You should always apply the brake and shift to Park when idling, or before exiting the vehicle.

If you select any gear other than Park when the driver's door is opened and the driver's seat belt is unbuckled, Park is re-engaged when the brake pedal is released.

Car wash mode

Follow the procedure below to use a conveyor-style car wash where you or an attendant do not remain in the vehicle. Make sure the wiper lever is in the OFF position. You should inform the car wash attendant of this procedure.

1. When the engine is running, apply the brake pedal, select Neutral (N), then release the brake pedal.
2. Press and hold Neutral for two seconds. This puts the vehicle into car wash mode.

If the ENGINE START/STOP button is pressed while the vehicle is in car wash mode, the power mode will change to ACCESSORY and a message will be displayed on the driver information interface. After 15 minutes, the gear position changes to Park and the power mode changes to OFF.

⚠ WARNING

When the transmission is too hot, car wash mode may not be available. Let the engine idle to cool the transmission.