


Adjusting the Rear Seats

Adjust second row seat, access third row seats, or remove seats for carrying cargo.


■ Adjusting the Second Row Passenger's Seats

Second row passenger's seats can be adjusted manually.

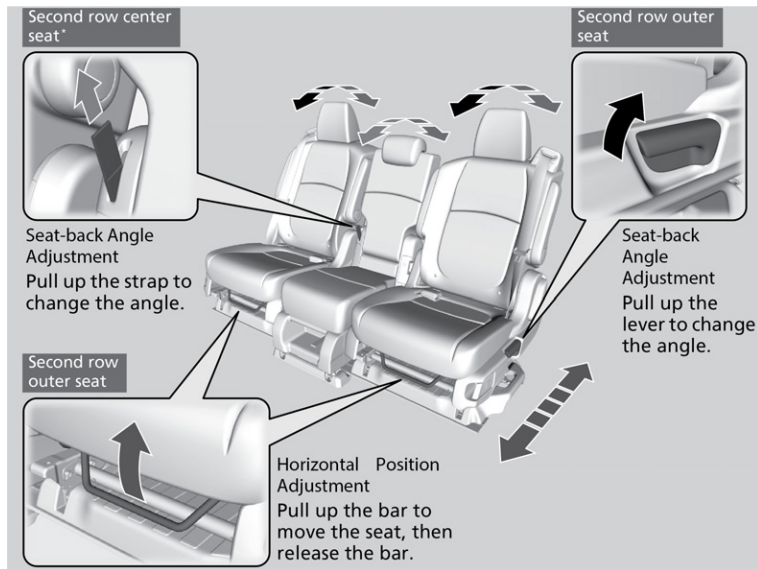

■ Adjusting the Third Row Passenger's Seats


Pull up the right strap to change the angle of the right hand seat back or the left strap for the left and center seat backs.

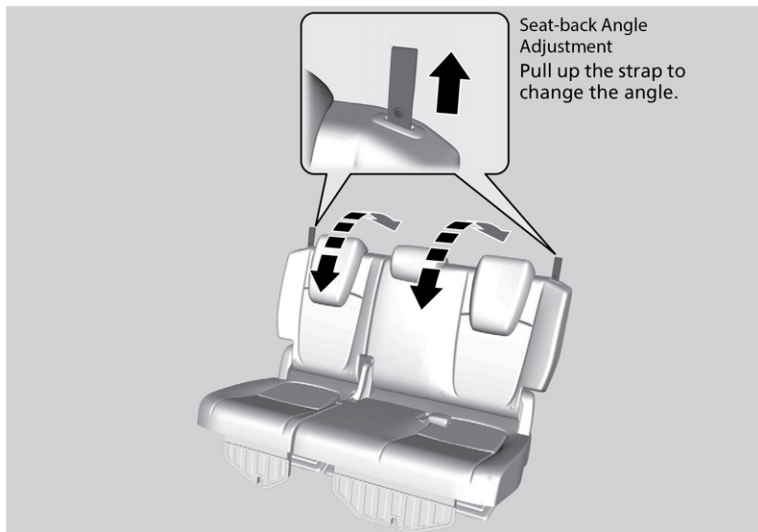

■ Removing the Second Row Center Seat*¹

The second row center seat can be removed to increase storage, cargo space, or passenger mobility.

1. Store the center seat belt.
2. Release the center seat belt detachable anchor (insert a key into the slot on the side of the anchor buckle) and retract the seat belt into the holder on the ceiling.
3. Pull up the adjustment strap and fold down the seat back.
4. Pull the lock release strap under the seat cushion and hold the seat back while lifting the rear of the seat.
5. Pull the seat back slightly, then pivot it upward to unhook the front of the seat from the floor.
6. Remove the seat.

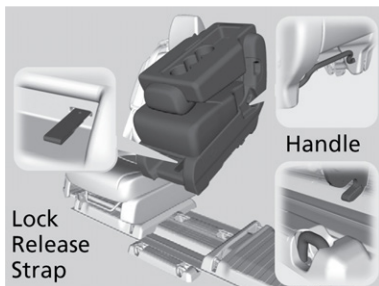

To reinstall the seat: First hook the front of the seat to the floor. Then push the rear of the seat back until it locks into place.

■ Removing a Second Row Outer Seat



Follow the steps below to remove either of the second row outer seats:

1. Remove the head restraint.

*¹ - If equipped

2. Move the seat to its rearmost position.
3. Fold the seat back down.
4. Pull the lock release lever and lift the rear of the seat.
5. Pull the seat back slightly, then pivot it upward.
6. Remove the seat.

To reinstall the seat: First hook the front of the seat to the floor. Then push the rear of the seat back until it locks into place.

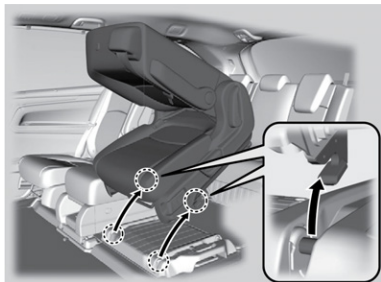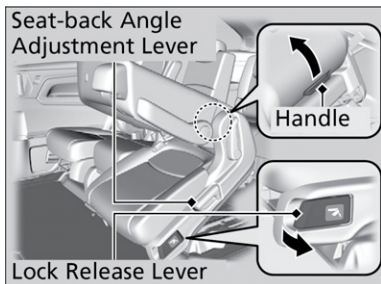

■ Sliding the Second Row Magic Slide™ Seats*1

With the second row center seat removed, the second row outer seats can be moved in or out. Pull up the handle at the side of the seat, then slide the seat.



*1 - If equipped