


Maintenance Minder™

When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

Press the Homebutton on the steering wheel to change displays.

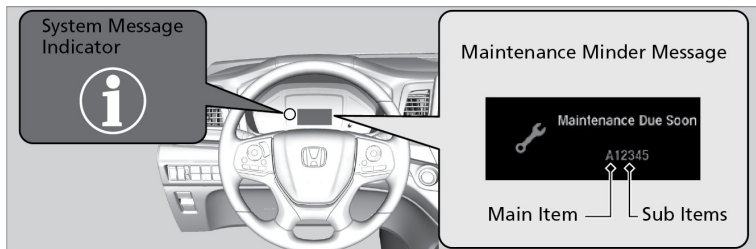

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

U.S. Models

CODE	Maintenance Main Items
A	⊗ Replace engine oil* ¹
B	<ul style="list-style-type: none"> ⊗ Replace engine oil*¹ and oil filter ⊗ Inspect front and rear brakes ⊗ Inspect tie rod ends, steering gearbox, and boots ⊗ Inspect suspension components ⊗ Inspect driveshaft boots ⊗ Inspect brake hoses and lines (Including ABS/VSA ®) ⊗ Inspect all fluid levels and condition of fluids ⊗ Inspect exhaust system[#] ⊗ Inspect fuel lines and connections[#]

*1: If the message Maintenance Due Now does not appear more than 12 months after the display is reset, change the engine oil every year.

: See information on maintenance and emissions warranty in the first column on page 748.

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

CODE	Maintenance Sub Items
1	⊗ Rotate tires
2	<ul style="list-style-type: none"> ⊗ Replace air cleaner element*² ⊗ Replace dust and pollen filter*³ ⊗ Inspect drive belt
3	⊗ Replace transmission fluid* ⁴
4	<ul style="list-style-type: none"> ⊗ Replace spark plugs ⊗ Replace timing belt and inspect water pump*⁵ ⊗ Inspect valve clearance
5	⊗ Replace engine coolant
7	⊗ Replace brake fluid* ⁶

*4: **Except ELITE and TOURING grade models**

Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed at 60,000 miles (100,000 km) or 3 years, thereafter every 30,000 miles (50,000 km) or 2 years.

*5: If you drive regularly in very high temperatures (over 110°F; 43°C), in very low temperatures (under -20°F; -29°C), replace every 60,000 miles (100,000 km).

*6: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Canadian Models

CODE	Maintenance Main Items
A	※ Replace engine oil *1
0	※ Replace engine oil *1 and oil filter

*1: If the message Maintenance Due Now does not appear more than 12 months after the display is reset, change the engine oil every year.

*2: If you drive in dusty conditions, replace the air cleaner element every 24,000 km (15,000 miles).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 24,000 km (15,000 miles).

*4: **Except TOURING grade model**

Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed at 100,000 km (60,000 miles) or 3 years, thereafter every 50,000 km (30,000 miles) or 2 years.

*5: If you drive regularly in very high temperatures (over 43°C, 110°F), in very low temperatures (under -29°C, -20°F), replace every 100,000 km (60,000 miles).

*6: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

: See information on maintenance and emissions warranty in the first column on page 749.

CODE	Maintenance Sub Items
1	※ Rotate tires
2	<ul style="list-style-type: none"> ※ Replace air cleaner element *2 ※ Replace dust and pollen filter *3 ※ Inspect drive belt
3	※ Replace transmission fluid *4
4	<ul style="list-style-type: none"> ※ Replace spark plugs ※ Replace timing belt and inspect water pump *5 ※ Inspect valve clearance
5	※ Replace engine coolant
7	※ Replace brake fluid *6
9	<ul style="list-style-type: none"> ※ Service front and rear brakes ※ Inspect tie rod ends, steering gearbox, and boots ※ Inspect suspension components ※ Inspect driveshaft boots ※ Inspect brake hoses and lines (including ABS/VSA ®) ※ Inspect all fluid levels and condition of fluids ※ Inspect exhaust system # ※ Inspect fuel lines and connections #