



## Parking Sensor System\*1

When the system senses an object when you are parking or backing up, indicators appear on the upper display and a series of beeps will sound. As you get closer to the object, the beep rate increases and the screen indicators change from blinking yellow to red.

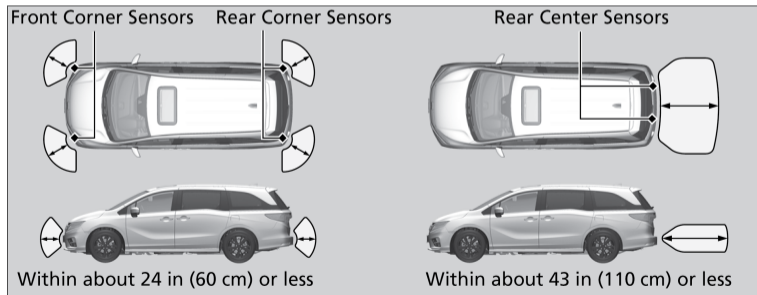

### ■ Turning the System On or Off

Press the parking sensor button to turn the system on or off. A green indicator light appears on the button when the system is on.

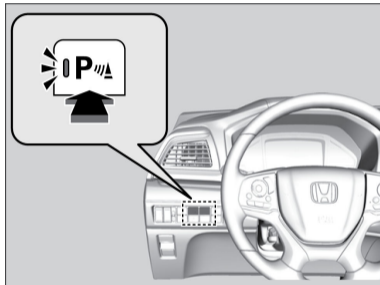

*\*1 - If equipped*