


# VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

## Using the Remote Transmitter

Lock or unlock the doors, tailgate, and fuel-fill door. Start and stop the engine.\*1




**Unlock button:** Press once to unlock the driver's door. Press again to unlock all doors.

**Tailgate button:** Press once to unlock the tailgate.

**Built-in key:** Slide the release knob on the back of the transmitter and pull out the built-in key.

**Lock button:** Press to lock the doors and tailgate. Press again for audible verification.

**Panic button:** Press and hold to sound the alarm for 30 seconds. Press any button to cancel.

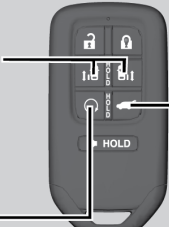

**Power sliding door buttons\*:** Press and hold to open the sliding door. Press again to stop the door during operation. Press again to close the door.

**Engine button\*:** After pressing the Lock button, press and hold to remotely start the engine.

**Power tailgate button\*:** Press and hold to unlock and open the power tailgate. Press again to close it.

Release knob

Built-in key

### NOTICE

Leaving the remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.

\*1 - If equipped