


### Adjusting the Rear Seats

Adjust or fold down the second row seats, adjust or fold down the third row seats, and access third row seats.

#### ■ Adjusting the Third Row Passenger's Seats


Pull up the right strap to change the angle of the right hand seat back or the left strap for the left and center seat backs.

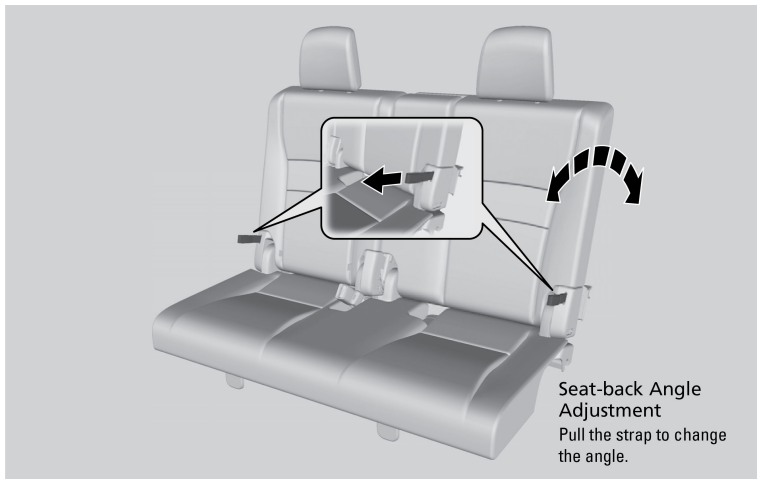

## ■ Third Row Seat Access


### Models with button type

Pressing the button on the seat-back or seat cushion tilts the second row outer seat's seat-back forward. The whole seat slides forward.

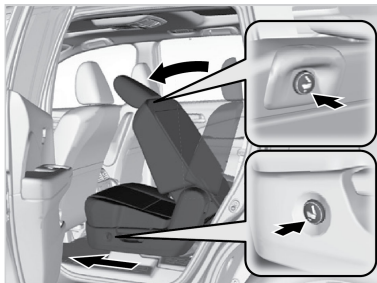


### Models with lever type

Pulling the lever on the seat side, and the second row outer seat's seat back forward. The whole seat slides forward.

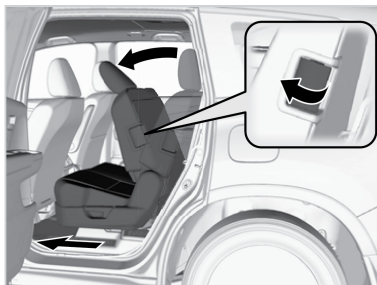

### All models

Pulling up on the strap also tilts the seat-back forward.

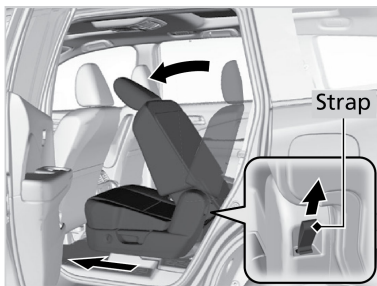


## ■ Folding Down the Rear Seats

Separately fold down the left and right halves of the rear seat to make room for cargo.

To fold down the seat:

## VEHICLE CONTROLS

1. Store the center seat belt.
2. Insert the latch plate into the slot on the side of the anchor buckle.
3. Retract the seat belt into the holder on the ceiling.
4. Lower the head restraint to its lowest position. Put the armrest back into the seat back.
5. Pull the release lever and fold down the seat-back.

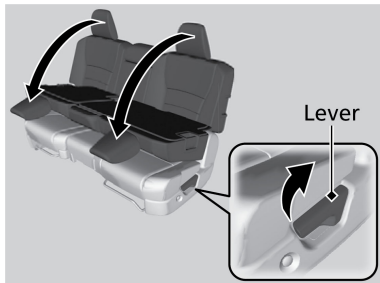

To return the seat to the original position, pull up the seat-back in the upright position.

### Folding Down the Third Row Seat

1. Pull the strap on the seat back fully. The head restraint tilts downward.
2. Push the seat back forward while pulling the strap.

To return the seat to the original position, pull the seat back up with the strap pulled, then push the head restraint up to its original position.

