

VEHICLE CONTROLS



Smart Entry System

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and the trunk without handling the transmitter.

■ Unlocking/Locking the Doors

To unlock: Grab the driver's door handle when the vehicle is off to unlock the driver's door. Grab the front passenger's door handle to unlock all the doors and the trunk. You can customize this feature's behavior.

To lock: Press the door lock button on either front door handle. If the remote transmitter is inside the vehicle, neither the doors nor trunk will lock.

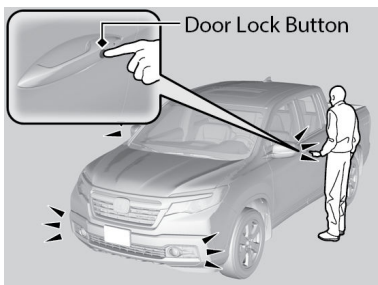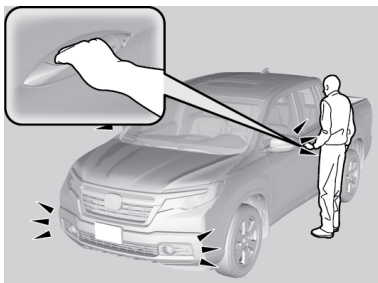

■ Walk Away Auto Lock

When you walk away from the vehicle while carrying the remote transmitter, the doors and trunk can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the trunk are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

To turn on this feature, follow these steps:

1. From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Keyless Access Setup.

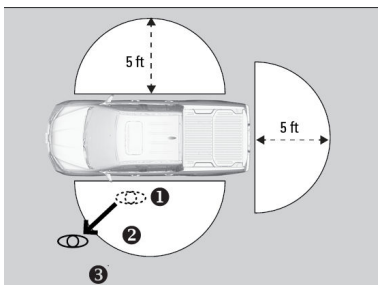



4. Select Walk Away Auto Lock.
5. Select Enable.

■ Customizing Door Lock & Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.

Models with Color Audio


Customizing Door Lock Settings

Steps	Drive Lock Mode ¹	Off
1	Apply the parking brake.	Apply the parking brake.
2	Close the driver's door.	Open the driver's door.
3	Set the power mode to ON.	Set the power mode to ON.
4	Press and hold the lock side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.	Press and hold the lock side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear one click.
		
5	Set the power mode to ACC ESSORY within 20 seconds. * Customization is completed.	

*1:Default setting

Customizing Door Unlock Settings

Customizing Flow for Auto Door Unlocking Options

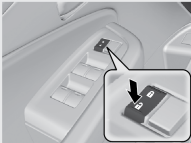Steps	Driver's Door Open Mode ¹	Park Unlock Mode	Off
1	Apply the parking brake. Move the shift lever out of P .	Apply the parking brake. Move the shift lever to P .	Apply the parking brake. Move the shift lever to P .
2	Close the driver's door.		Open the driver's door.
3	Set the power mode to ON.		Set the power mode to ON.
4	Press and hold the unlock side of the master door lock switch on the driver's door for more than five seconds. Release the switch after you hear a click twice.		
			
5	Set the power mode to ACCESSORY within 20 seconds. * Customization is completed.		

*1:Default setting