



Customized Features

When you customize settings, make sure that the vehicle is at a complete stop and shift to Park (P).

Models with Color Audio

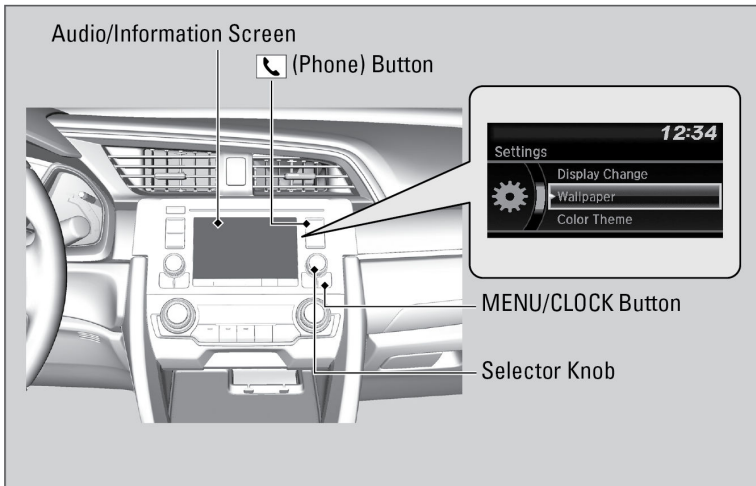

Models with Display Audio

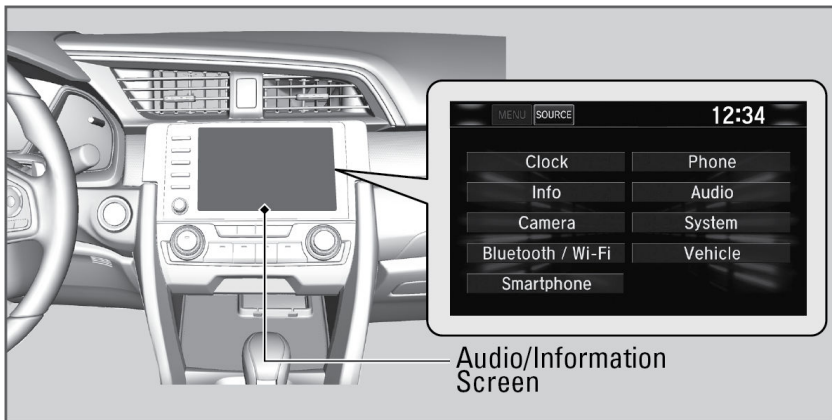

■ To Change a Setting

Models with Color Audio

Use the selector knob to make and enter selections.

1. Press the MENU/CLOCK button.
2. Select Settings.
3. Select a setting option and make your preferred changes.
4. Press the **Back** button to exit the menus.

Models with Display Audio


1. Press the **Home** button.
2. Select **Settings**.
3. Select a category.
4. Select a setting option, and make your preferred changes.
5. Press the Back button to exit the menus.

Setting the Clock

On vehicles with navigation, the time is automatically set using GPS signals. To manually adjust the clock, use the following steps:

Models with Color Audio

1. Press and hold the **MENU/CLOCK** button. **Adjust Clock** is selected.
2. Rotate knob to change the hour, then press the selector knob.
3. Rotate knob to change the minute, then press the selector knob.
4. To enter the selection, rotate knob, select **Set**, then press the selector knob.

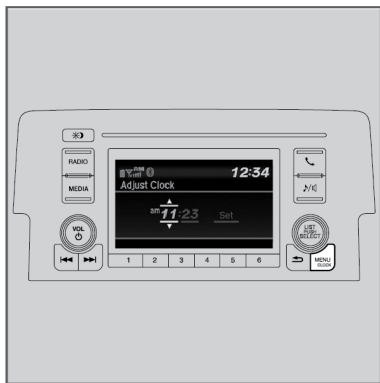

Models with Display Audio

Using the **Settings** menu on the audio/information screen.

1. Select **Settings**.
2. Select **Clock**.
3. Select **Clock Adjustment**.
4. Select the up arrow or the down arrow to change the hour.
5. Select the up arrow or the down arrow to change the minute.
6. Select **OK** to set the time.



■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and door unlock settings to your preference.

Models with Color Audio

Using the Driver Information Interface

1. Press the **Display/Information** button, then select **Vehicle Settings**. Press the **ENTER** button.
2. Select **Door Setup**.
3. Select **Auto Door Lock** or **Auto Door Unlock** then select an option.

Models with Display Audio

Using the Audio/Information Screen

1. Press the **Home** button.
2. Select **Settings**.
3. Select **Vehicle**.
4. Select **Door/Window Setup**.
5. Select **Auto Door Lock** or **Auto Door Unlock** then select an option.