


Remote Engine Start*1

Start your vehicle's engine using the remote transmitter before you enter the vehicle.

■ Starting the Engine

Press the Lock button, then press and hold the Engine button to remotely start the engine.

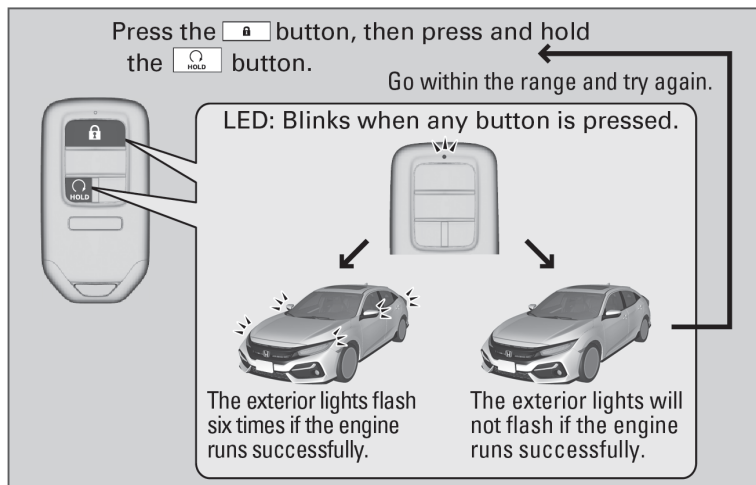

- The engine runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

When started remotely, the engine automatically shuts off after 10 minutes of idling and/or the brake pedal and ENGINE START/STOP button have not been pressed simultaneously.

Note: The remote engine start may violate local laws.

Before using the remote engine start, check your local laws.

**1 - If equipped*

DRIVING

If there are buildings and obstacles between your vehicle and the remote, the range will be reduced.

The range may be less when the vehicle is running.

This distance may vary by external electrical interference.

The engine may not start by the remote engine start if:

- You have disabled a remote engine start setting using the audio/information screen.
- The power mode is not in VEHICLE OFF (LOCK).
- The transmission is in a position other than P.
- The hood is open, or any door or the hatch is unlocked.