


## Smart Entry System\*1

When you carry the remote transmitter, in a pocket or purse and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors, and open the trunk without handling the transmitter.


### ■ Unlocking/Locking the Doors and Trunk

**To unlock:** Grab the driver's door handle to unlock the driver's door and the fuel fill door. Grab the front passenger's door handle to unlock all the doors. You can customize this feature's behavior.

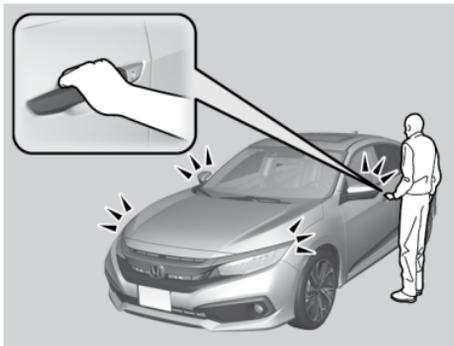

*\*1 - If equipped*

**To lock:** Press the door lock button on the front door. If the remote transmitter is inside the vehicle, the doors will not lock.

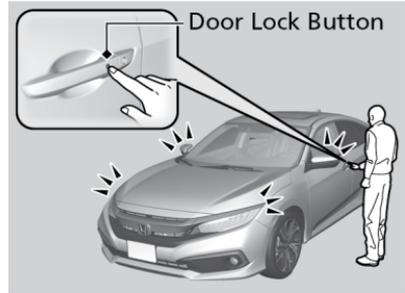

**Note:** System range is affected by radio signals from other devices (for example, cell phones or tablets) so for best results, carry the remote transmitter separately from these devices.

### ■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and unlock settings to your preference.

#### Models with Color Audio

##### Using the Driver Information Interface

1. Press the **Display/Information** button, then select **Vehicle Settings**. Press the **ENTER** button.
2. Select **Door Setup**.
3. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

#### Models with Display Audio

##### Using the Audio/Information Screen

1. Press the **Home** button.
2. Select **Settings**.
3. Select **Vehicle**.
4. Select **Door/Window Setup**.
5. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

### ■ Walk Away Auto Lock<sup>®</sup>

When you walk away from the vehicle while carrying the remote transmitter, the doors and trunk can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the trunk are closed.
- There is no additional remote transmitter inside the vehicle.

Follow these steps:

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

The auto lock function is set to OFF as the factory default setting. It can be set to ON using the audio/information

screen. If you set the auto lock function to ON, only the remote transmitter that was used to unlock the driver's door prior to the setting change can activate auto lock. To turn on this feature, follow the steps below:

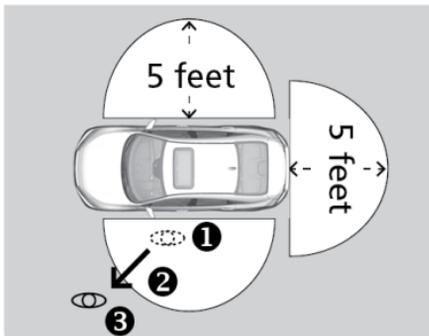

### Models with Display Audio

#### Using the Audio/Information Screen

1. Press the HOME button then select **Settings**.
2. Select **Vehicle**.
3. Select **Door/Window Setup**.
4. Select **Walk Away Auto Lock<sup>®</sup>**, then select **ON**.

### Smart Entry System Battery Strength

#### Models with Smart Entry System

If the beeper sounds, the **To Start, Hold Remote Near Start Button** message appears on the driver information interface, and the indicator on the **ENGINE START/STOP** button flashes, and the engine won't start. Start the engine as follows:

1. Touch the center of the **ENGINE START/STOP** button with the **A** logo on the keyless access remote while the indicator on the **ENGINE START/STOP** button is flashing. The buttons on the keyless access remote should be facing you.

The **ENGINE START/STOP** button flashes for about 30 seconds.

2. Depress the brake pedal or clutch pedal and press the **ENGINE START/STOP** button within 10 seconds after the beeper sounds and the **ENGINE START/STOP** button changes from flashing to on.

If you do not depress the pedal, the mode will change to **ACCESSORY**.

