


Climate Control System

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

■ Front Operation - Climate Control System

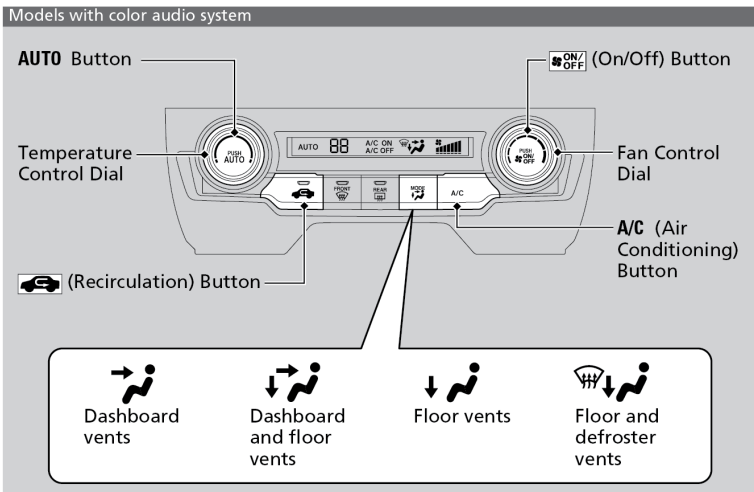

VEHICLE CONTROLS

Models with Display Audio
Models without SYNC button

A/C (Air Conditioning) Icon

MODE Control Icon
(Dashboard vents)


MODE Control Icon
(Floor vents)

Fan Control Icon

Temperature Control Dial

AUTO Button


(Recirculation) Button

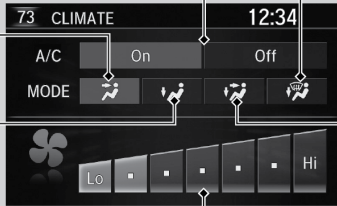

MODE Control Icon
(Floor and defroster vents)

MODE Control Icon
(Dashboard and floor vents)

CLIMATE (CLIMATE) Button

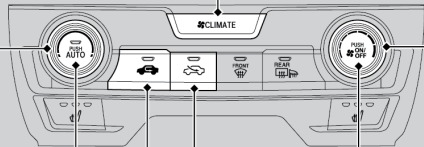

Fan Control Dial

ON/OFF (On/Off) Button

(Fresh Air) Button

Models with Display Audio
Models with SYNC button

A/C (Air Conditioning) Icon

MODE Control Icon
(Dashboard vents)

MODE Control Icon
(Floor vents)


Fan Control Icon

Fan Control Buttons

Driver's Side Temperature Control Dial

AUTO Button


ON/OFF (On/Off) Button

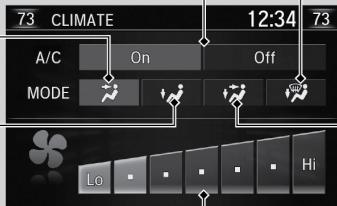

MODE Control Icon
(Floor and defroster vents)

MODE Control Icon
(Dashboard and floor vents)

CLIMATE (CLIMATE) Button

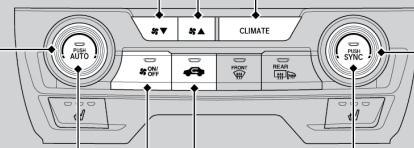

Passenger's Side Temperature Control Dial


SYNC (Synchronization) Button

(Recirculation) Button

Front Seat Heaters*1

Press the seat heater button to cycle through settings.

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

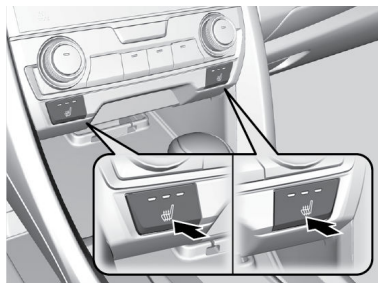

After a certain period of time, the strength setting for the seat heaters will automatically be reduced by one level at a time until the seat heater shuts off. The elapsed time varies according to the interior environment.

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**1 - If equipped*