




# Controls

## Clock

The navigation system receives signals from GPS satellites, updating the clock automatically.


You can also adjust the time manually.



- 1 Select the  (Home) icon, then select **Settings**.
- 2 Select **Clock**, then **Clock Adjustment**.
- 3 Touch the respective / icon to adjust the hours or minutes up or down.
- 4 Select **OK**.


## POWER Button

Press the button to change the vehicle's power mode.

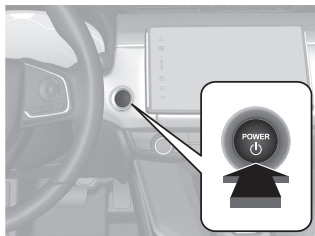

## Turn Signals

Turn Signal Control Lever

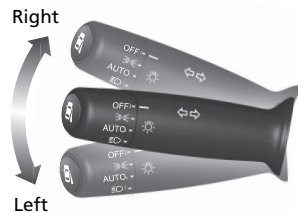

## Lights

Light Control Switches

