 


Siri® Eyes Free


You can talk to Siri using the  (Talk) button on the steering wheel when your iPhone is paired to the **Bluetooth®** HandsFreeLink® (HFL) system.

Using Siri Eyes Free




(Hang-up/back) Button

Press to deactivate Siri Eyes Free.

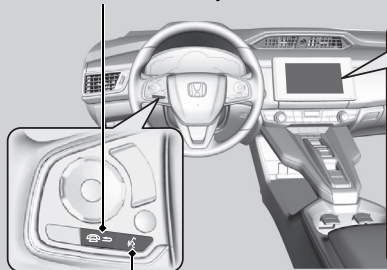

(Talk) Button

Press and hold until the display changes as shown.

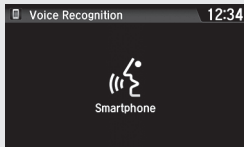

Appears when Siri is activated in Siri Eyes Free

While in Siri Eyes Free:
The display remains the same.
No feedback or commands appear.

❖ Siri® Eyes Free

Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri Eyes Free while operating a vehicle.

❖ Using Siri Eyes Free

Some commands work only on specific phone features or apps.