
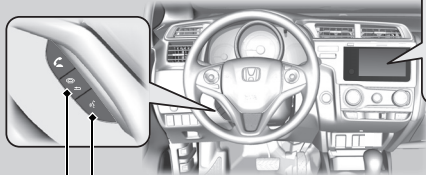


Siri® Eyes Free

You can talk to Siri® using the  (Talk) button on the steering wheel when your iPhone is paired to the **Bluetooth®** HandsFreeLink® (HFL) System.

Using Siri® Eyes Free



Appears when Siri® is activated in Siri® Eyes Free



While in Siri® Eyes Free:
The display remains the same.
No feedback or commands appear.

 **(Talk) Button**

Press and hold until the display changes as shown.

 **(Hang-up/back) Button**

Press to deactivate Siri®.

⌘ Siri® Eyes Free

Siri® is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri®.

We recommend against using Siri® other than in Siri® Eyes Free while operating a vehicle.

⌘ Using Siri® Eyes Free

Some commands work only on specific phone features or apps.