


### Turn Signals

The turn signals can be used when the ignition switch\*1 / **ENGINE START/STOP** button\*1 is in ON.

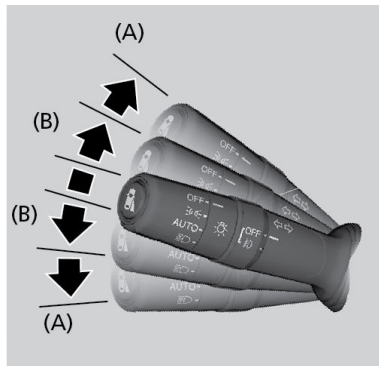

#### (A): Turn Signal

When turning the car, push the lever up or down based on the direction you want to turn, and the turn signal will blink.

#### (B): One-touch Turn Signal

When you lightly push the lever up or down and release it, the turn signal will blink 3 times.

*\*1 - If equipped*