


Maintenance Minder™

When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil or when to bring your vehicle to a dealer for indicated maintenance services.

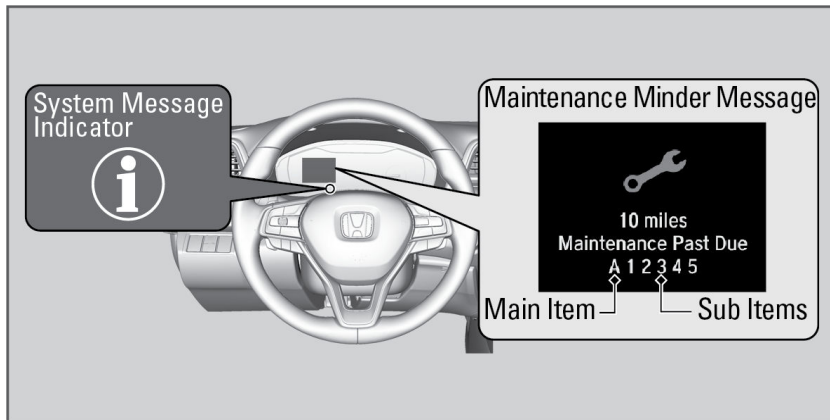

You can view them on the engine oil life screen at any time.

1. Set the power mode to ON.
2. Press the Home button
3. Roll the left selector wheel until the wrench symbol is displayed.
4. Press the left selector wheel to go to the Maintenance screen. The engine oil life appears on the driver information interface along with maintenance items due soon.

MAINTENANCE

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.

U.S. Models

- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

Canadian Models

- Independent of the Maintenance Minder information, adjust the valves during services A, 0, 9, 1, 2, or 3 if they are noisy.

U.S. Models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the Driver Information Interface.

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

U.S. Models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none">• Replace engine oil*¹
B	<ul style="list-style-type: none">• Replace engine oil*¹ and oil filter• Inspect front and rear brakes• Inspect tie rod ends, steering gearbox, and boots• Inspect suspension components• Inspect driveshaft boots• Inspect brake hoses and lines (Including ABS/VSA[®])• Inspect all fluid levels and condition of fluids• Inspect exhaust system[#]• Inspect fuel lines and connections[#]

*1: If a Maintenance Minder message does not appear more than 12 months after the display is reset, change the engine oil every year.

: See information on maintenance and emissions warranty under Warranty Coverages in the Owner's Manual.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> • Rotate tires
2	<ul style="list-style-type: none"> • Replace air cleaner element^{*2} • Replace dust and pollen filter^{*3}
3	<ul style="list-style-type: none"> • Replace transmission fluid^{*4}
4	<ul style="list-style-type: none"> • Replace spark plugs • Inspect valve clearance
5	<ul style="list-style-type: none"> • Replace engine coolant
7	<ul style="list-style-type: none"> • Replace brake fluid^{*5}

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 47,500 miles or 3 years (76,000 km or 3 years).

*5: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Canadian Models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none">• Replace engine oil*1
0	<ul style="list-style-type: none">• Replace engine oil*1 and oil filter

*1: If a Maintenance Minder Message does not appear more than 12 months after the display is reset, change the engine oil every year.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none">• Rotate tires
2	<ul style="list-style-type: none">• Replace air cleaner element*2• Replace dust and pollen filter*3
3	<ul style="list-style-type: none">• Replace transmission fluid*4
4	<ul style="list-style-type: none">• Replace spark plugs• Inspect valve clearance
5	<ul style="list-style-type: none">• Replace engine coolant
7	<ul style="list-style-type: none">• Replace brake fluid*5
9	<ul style="list-style-type: none">• Service front and rear brakes• Inspect tie rod ends, steering gear box, and boots• Inspect suspension components• Inspect driveshaft boots• Inspect brake hoses and lines (including ABS/VSA®)• Inspect all fluid levels and condition of fluids• Inspect exhaust system#• Inspect fuel lines and connections#

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 47,500 miles or 3 years (76,000 km or 3 years).

*5: If a Maintenance Minder Message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

: See information on maintenance and emissions warranty under Warranty Coverages in the Owner's Manual.