

## Shifting

Change the gear position based on your driving needs.

### ■ Electronic Gear Selector

Select the vehicle's gear using a simple button interface. Apply the brake pedal and select a gear.



- Park (P):** Press the (P) button to put the vehicle in Park.
- Reverse (R):** Pull back the (R) button to put the vehicle in Reverse.
- Neutral (N):** Press the (N) button to put the vehicle in Neutral. Transmission is not locked.

**Drive/S  
Position  
(D/S):**

Each time you press the D/S button, the mode switches between Drive and S mode.

Used for:

**Drive:** Normal driving (gears change between 1st and 9th automatically).

Temporarily driving in the sequential mode.

**S Position:** Automatically changing gears between 1st and 8th (8th gear is used only at high speed).

Driving in the sequential mode.

### **⚠ WARNING**

The vehicle can roll away if left unattended without confirming that Park **(P)** is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that **(P)** is shown on the gear position indicator.

### **NOTICE**

When you change from **D** to **R** and vice versa, or want to change to Park **(P)**, come to a complete stop and keep the brake pedal applied. Operating the gear buttons before the vehicle has come to a complete standstill can damage the transmission.

#### **Auto park mode**

For your convenience, Park **(P)** is automatically engaged when the vehicle is turned off, or when all of the following conditions are met:

The vehicle is stopped with the engine running, the driver's seat belt is unbuckled, and the driver's door is opened. You should always apply the brake and shift to Park when idling, or before exiting the vehicle.

If you select any gear other than Park when the driver's door is opened and the driver's seat belt is unbuckled, Park is re-engaged when the brake pedal is released.

#### **Car Wash Mode**

Follow the procedure below to use a conveyor-style car wash where you or an attendant do not remain in the vehicle. Make sure the wiper lever is in the OFF position. You should inform the car wash attendant of this procedure.

1. With the engine running, press and hold the brake pedal.
2. Select (N), then release the button to display N (Neutral) hold mode on the driver information interface.
3. Press and hold (N) again for two seconds.

If the **ENGINE START/STOP** button is pressed after the car wash mode has been activated, the power mode will change to **ACCESSORY** and a message will be displayed on the driver information interface. After 15 minutes, the gear position changes to Park and the power mode changes to **OFF**.

- For 15 minutes the gear position remains in **N** and the power mode will remain in **ACCESSORY**. After that, the position automatically changes to **P** and the power mode changes to **OFF**.
- Manually changing to **P** cancels **ACCESSORY** mode. The **P** indicator comes on and the power mode changes to **OFF**. You must always shift to **P** when car wash mode is no longer needed.

## NOTICE

When the transmission is too hot, car wash mode may not be available. Let the engine idle and cool down the transmission.