



Parking Sensor System*1

The corner and center sensors monitor obstacles near your vehicle. The beeper and audio/information screen let you know the approximate distance between your vehicle and the obstacle. As you get closer to the object, the beep rate increases and the screen indicators blink yellow, amber, or red depending on proximity to object.

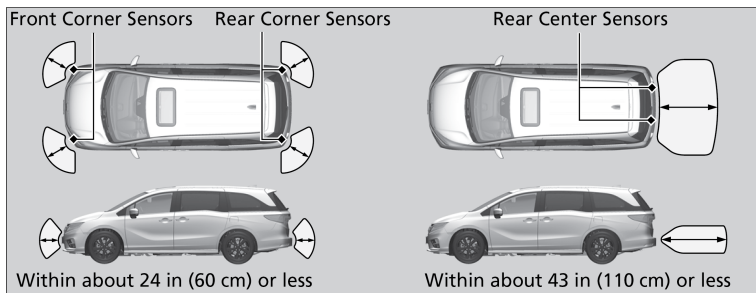

■ Turning the System On or Off

With the power mode in ON, press the parking sensor system button to turn on or off the system. The indicator in the button comes on when the system is on.

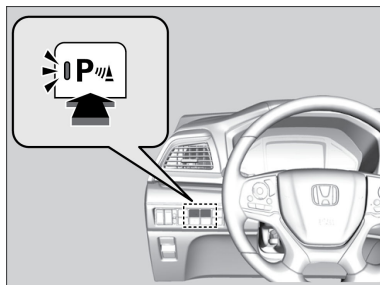

*1 - If equipped