

Climate Control System

- Press the AUTO button to activate the climate control system.
- Press the SON/ button to turn the system on or off.
- Press the ROW button to defrost the windshield.

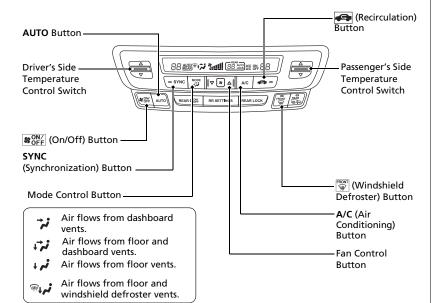

Rear Climate Control*

- Press the AUTO button to activate the rear climate control system.
- Press the button to turn the system on or off.

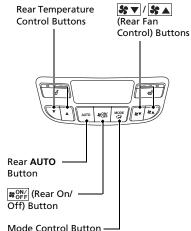

- Air flows from the rear console vents.
- Air flow from the rear console vents and floor vents.
- Air flows from the rear floor vents.