

■ Electronic Gear Selector*1

Select the vehicle's gear using a simple button interface. Apply the brake pedal and select a gear.



- Park (P):** Press the (P) button to put the vehicle in Park.
- Reverse (R):** Pull back the (R) button to put the vehicle in Reverse.
- Neutral (N):** Press the (N) button to put the vehicle in Neutral.
Transmission is not locked.

**1 - If equipped*

**Drive/S
Position
(D/S):**

Each time you press the D/S button, the mode switches between Drive and S mode.

Used for:

Drive: Normal driving (gears change between 1st and 9th automatically).

Temporarily driving in the sequential mode.

S Position: Automatically changing gears between 1st and 8th (8th gear is used only at high speed).

Driving in the sequential mode.

WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that **(P)** is shown on the gear position Indicator

NOTICE

When you change from Drive **D** to Reverse **R** and vice versa, or want to change to Park **(P)**, come to a complete stop and keep the brake pedal applied. Operating the gear buttons before the vehicle has come to a complete standstill can damage the transmission.

Car Wash Mode

Follow the procedure below to use a conveyor-style car wash where you or an attendant do not remain in the vehicle. Make sure the wiper lever is in the OFF position. You should inform the car wash attendant of this procedure.

1. With the engine running, press and hold the brake pedal.
2. Select (N), then release the button to display N (Neutral) hold mode on the driver information interface.
3. Press and hold (N) again for two seconds.

This puts the vehicle in car wash mode which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.

If the **ENGINE START/STOP** button is pressed after the car wash mode has been activated, the power mode will change to ACCESSORY and a message

will be displayed on the driver information interface Multi-Information Display.

- For 15 minutes the gear position remains in **N** and the power mode will remain in **ACCESSORY**. After that, the position automatically changes to **P** and the power mode changes to **OFF**.
- Manually changing to **P** cancels **ACCESSORY** mode. The **P** indicator comes on and the power mode changes to **OFF**. You must always shift to **P** when car wash mode is no longer needed.