


Maintenance Minder™

When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

You can view them on the engine oil life screen at any time.

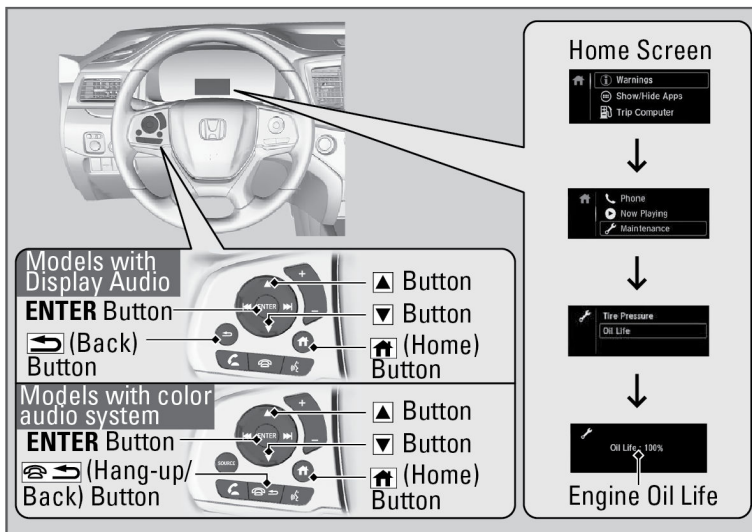

1. Set the power mode to ON.
2. Press the **ENTER** button repeatedly until the home screen appears.

**1 - If equipped*

3. Select **Maintenance** by pressing the up arrow or down arrow repeatedly. Then press **ENTER**.
 4. Select **Oil Life** by pressing the up arrow or down arrow then press **ENTER**.
 5. The engine oil life appears on the screen.
- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.

U.S. Models

- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

Canadian Models

- Independent of the Maintenance Minder information, adjust the valves during services A, 0, 9, 1, 2, or 3 if they are noisy.

U.S. Models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the Driver Information Interface.

MAINTENANCE

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

U.S. Models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none">• Replace engine oil*¹
B	<ul style="list-style-type: none">• Replace engine oil*¹ and oil filter• Inspect front and rear brakes• Check parking brake adjustment• Inspect tie rod ends, steering gearbox, and boots• Inspect suspension components• Inspect driveshaft boots• Inspect brake hoses and lines (Including ABS/VSA[®])• Inspect all fluid levels and condition of fluids• Inspect exhaust system[#]• Inspect fuel lines and connections[#]

*1: If the message **Maintenance Due Now** does not appear more than 12 months after the display is reset, change the engine oil every year.

: See information on maintenance and emissions warranty under Warranty Coverages in the Owner's Manual.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none">• Rotate tires
2	<ul style="list-style-type: none">• Replace air cleaner element*²• Replace dust and pollen filter*³• Inspect drive belt
3	<ul style="list-style-type: none">• Replace transmission fluid and transfer fluid*
4	<ul style="list-style-type: none">• Replace spark plugs• Replace timing belt and inspect water pump*⁴• Inspect valve clearance
5	<ul style="list-style-type: none">• Replace engine coolant
6	<ul style="list-style-type: none">• Replace rear differential fluid*.⁵
7	<ul style="list-style-type: none">• Replace brake fluid*⁶

*2: If you drive in dusty conditions, replace every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace every 15,000 miles (24,000 km).

*4: If you drive regularly in very high temperatures (over 110°F, 43°C), in very low temperatures (under -20°F, -29°C), replace every 60,000 miles (U.S.)/100,000 km (Canada).

*5: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher level of mechanical (Shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the differential fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).

*6: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

* Not available on all models

Canadian Models

CODE	Maintenance Main Items
------	------------------------

A • Replace engine oil*¹

0 • Replace engine oil*¹ and oil filter

*1: If the message **Maintenance Due Now** does not appear more than 12 months after the display is reset, change the engine oil every year.

CODE	Maintenance Sub Items
------	-----------------------

1 • Rotate tires

2 • Replace air cleaner element*²
 • Replace dust and pollen filter*³
 • Inspect drive belt

3 • Replace transmission fluid and transfer fluid*

4 • Replace spark plugs
 • Replace timing belt and inspect water pump*⁴
 • Inspect valve clearance

5 • Replace engine coolant

6 • Replace rear differential fluid*⁵,*⁵

7 • Replace brake fluid*⁶

9 • Service front and rear brakes
 • Check parking brake adjustment
 • Inspect tie rod ends, steering gearbox, and boots
 • Inspect suspension components
 • Inspect driveshaft boots
 • Inspect brake hoses and lines (including ABS/VSA®)
 • Inspect all fluid levels and condition of fluids
 • Inspect exhaust system#
 • Inspect fuel lines and connections#

*2: If you drive in dusty conditions, replace every 24,000 km (15,000 miles).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace every 24,000 km (15,000 miles).

*4: If you drive regularly in very high temperatures (over 43°C, 110°F), in very low temperatures (under -29°C, -20°F), replace every 100,000 km (60,000 miles).

*5: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher level of mechanical (Shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the differential fluid changed at 12,000 km (7,500 miles), then every 24,000 km (15,000 miles).

*6: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

: See information on maintenance and emissions warranty under Warranty Coverages in the Owner's Manual.

* Not available on all models