




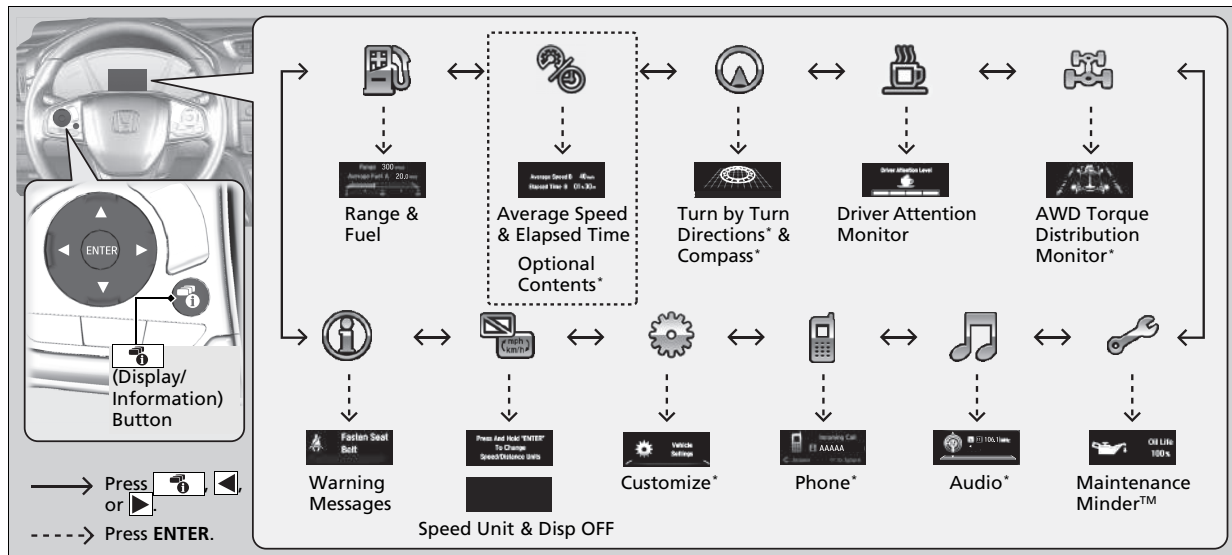
## Driver Information Interface

The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.

### Switching the Display


#### Main displays


Press the  (display/information) button and press  or  to change the display. Press **ENTER** to see detailed information.



\* Not available on all models

### ■ Trip computer

Press the  (TRIP) knob to change the display.

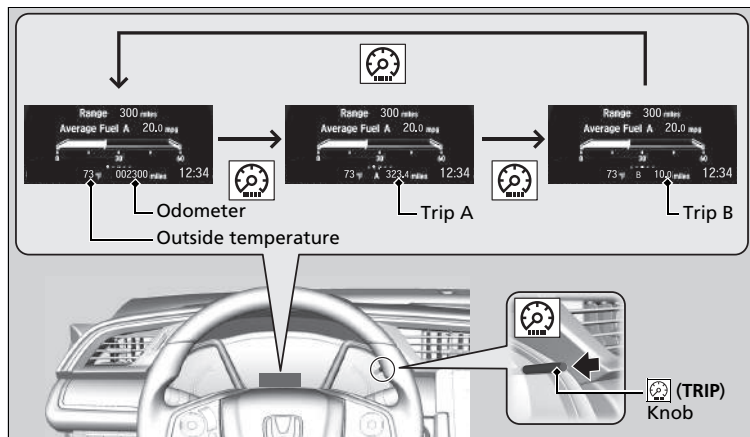


### ■ Odometer

Shows the total number of miles (U.S.) or kilometers (Canada) that your vehicle has accumulated.


### ■ Trip Meter

Shows the total number of miles (U.S.) or kilometers (Canada) driven since the last reset. Meters A and B can be used to measure two separate trips.

### ☒ Trip Meter

Switch between trip meter A and trip meter B by pressing the  knob, or by using the customized features on the driver information interface or audio/information display.

### ■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the  knob. The trip meter is reset to **0.0**.

### ■ Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

### ■ Range

Shows the estimated distance you can travel on the remaining fuel. This distance is estimated from the fuel economy of your previous trips.

### ■ Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

### ■ Average Speed

Shows the average speed in mph (U.S.) or km/h (Canada) since Trip A or Trip B was reset.

### ■ Engine Oil Life

Shows the remaining oil life and Maintenance Minder™.

#### ⌘ Average Fuel Economy

You can change when to reset the average fuel economy.

#### ⌘ Elapsed Time

You can change when to reset the elapsed time.

#### ⌘ Average Speed


You can change when to reset the average speed.


Models with color audio system

## Customized Features



Use the driver information interface to customize certain features.

### How to customize

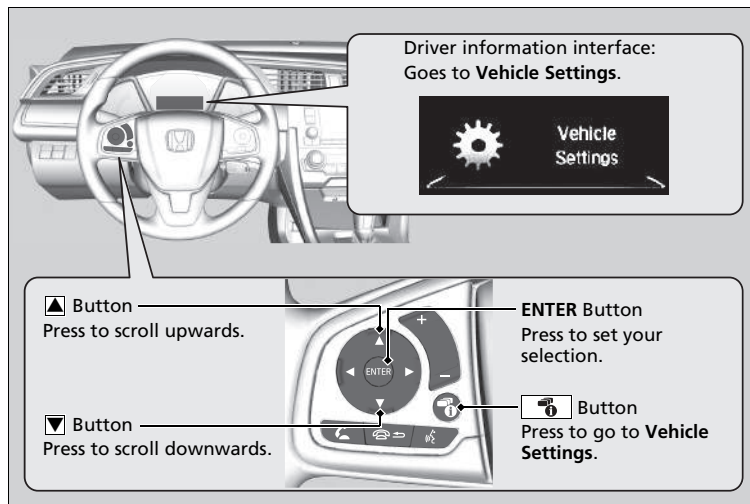Select the **Vehicle Settings** screen by pressing the  button while the ignition switch is in ON **[II]**, and the vehicle is at a complete stop, and the shift lever is in **[P]**. Select **Vehicle Settings**, then press the **ENTER** button.




### Customized Features

To customize other features, press the  /  button.

When you customize settings:  
Shift to **[P]**.

■ **Customization flow**

Press the  button.

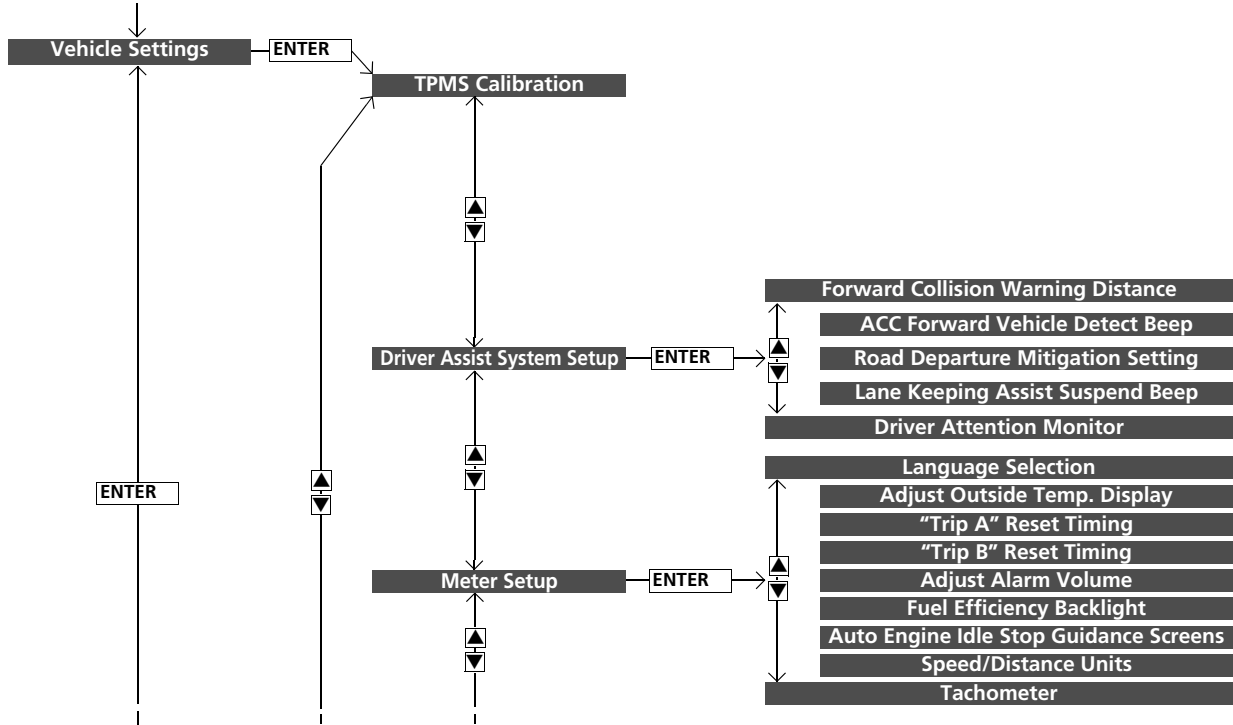

Instrument Panel

Instrument Panel

