

## Playing SiriusXM® Radio\*

**Audio/Information Screen**

**Album Art**

**Settings Icon**  
Select settings to display and customize siriusXM settings.

**Sound Icon**  
Select to display the sound settings.

**Channel List Icon**  
Select to display the channel list. Select **Keypad** to use the on-screen keyboard for entering the channel number directly.

**Channel Icons**  
Select ◀ or ▶ to the previous or next channel.  
Select and hold to rapidly skip 10 channels at a time.

**Category Icons**  
Select ◀ or ▶ to display and select a SiriusXM® Radio category.

**Presets**  
Tune the radio frequency for preset memory. Select and hold the preset icon to store that channel. Select ▶ to display beyond preset 5.

**Buttons**  
Select ◀◀ or ▶▶ to the previous or next channel.  
Select and hold to rapidly skip 10 channels at a time.

**BACK (Back) Button**  
Press to go back to the previous display.

**VOL/⏻ AUDIO (Volume/Power) Knob**  
Push to turn the audio system on and off.  
Turn to adjust the volume.

\* Not available on all models