


# Visual Index

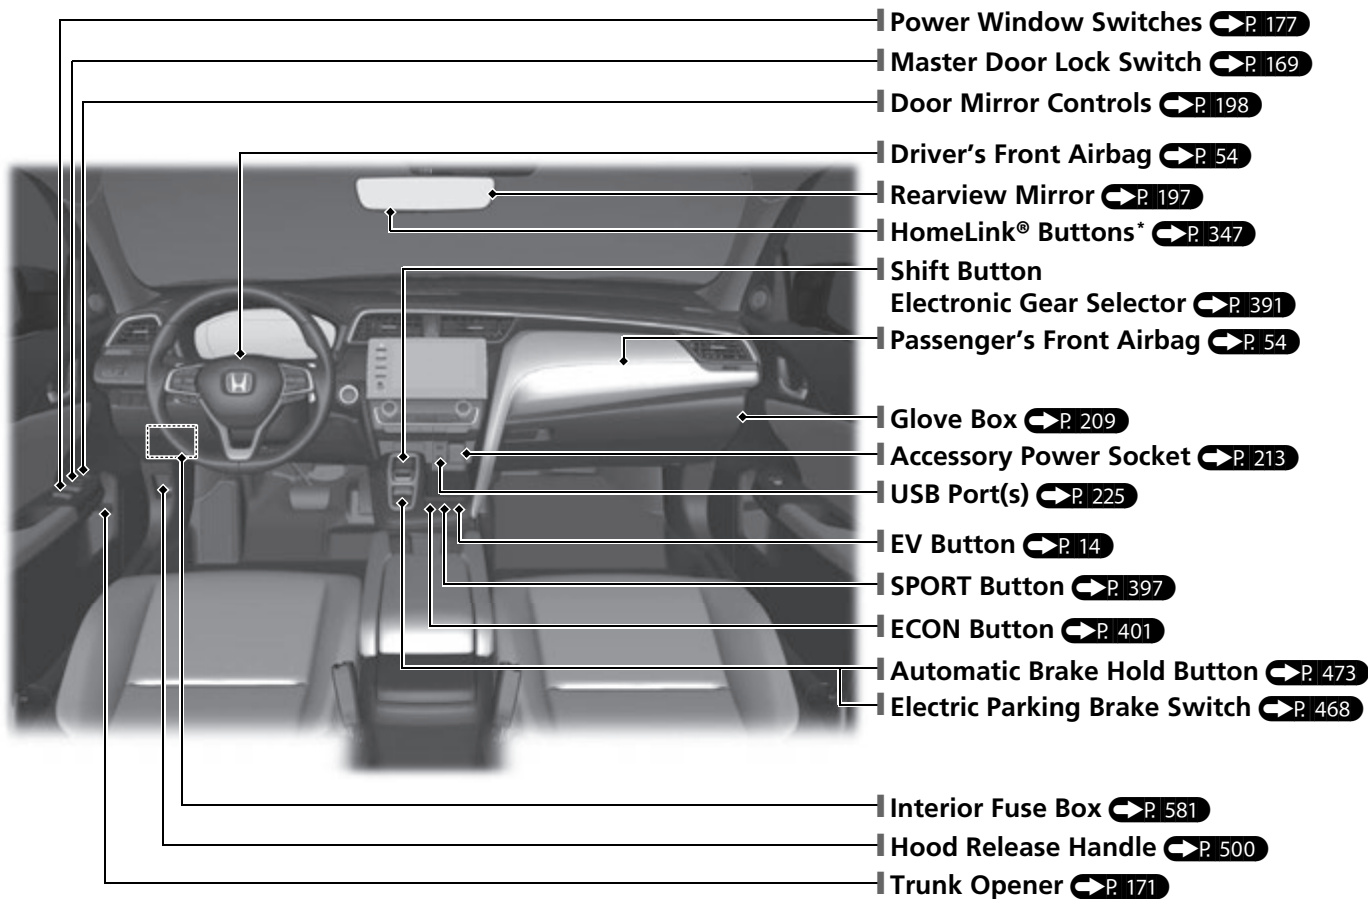

Power Window Switches ➔ P. 177

Master Door Lock Switch ➔ P. 169

Door Mirror Controls ➔ P. 198

Driver's Front Airbag ➔ P. 54

Rearview Mirror ➔ P. 197

HomeLink® Buttons\* ➔ P. 347

Shift Button

Electronic Gear Selector ➔ P. 391

Passenger's Front Airbag ➔ P. 54

Glove Box ➔ P. 209

Accessory Power Socket ➔ P. 213

USB Port(s) ➔ P. 225

EV Button ➔ P. 14

SPORT Button ➔ P. 397

ECON Button ➔ P. 401

Automatic Brake Hold Button ➔ P. 473

Electric Parking Brake Switch ➔ P. 468


Interior Fuse Box ➔ P. 581

Hood Release Handle ➔ P. 500

Trunk Opener ➔ P. 171

## Audio Remote Controls

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

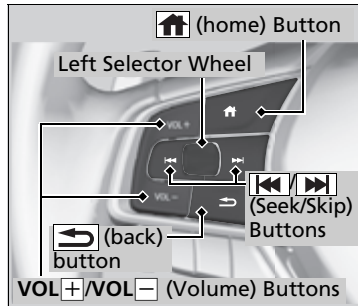

### VOL+ / VOL- (Volume) Buttons

Press VOL+: To increase the volume.

Press VOL-: To decrease the volume.

### Left Selector Wheel

- When selecting the audio mode  
Press the (home) button, then roll up or down to select **Audio** on the driver information interface, and then press the left selector wheel.

### Audio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.


Press the (back) button for the driver information interface to go back to the previous screen or cancel a command.

Press the (home) button to go back to the home screen of the driver information interface.







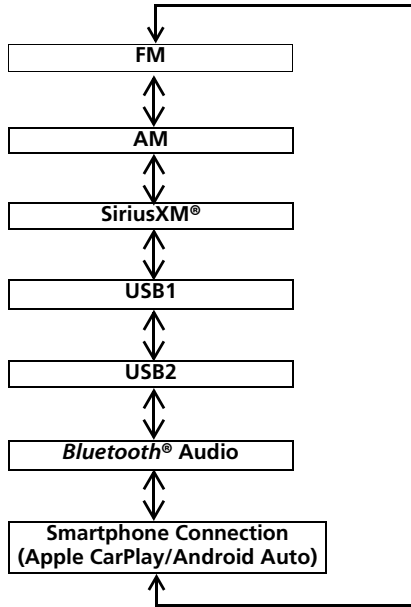

Continued

### Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:



### (Seek/Skip) Buttons

- When listening to the radio
  - Press **: To select the next preset radio station.
  - Press **: To select the previous preset radio station.
  - Press and hold **: To select the next strong station.
  - Press and hold **: To select the previous strong station.
- When listening to an iPod, USB flash drive, or *Bluetooth*® Audio, or Smartphone Connection
  - Press **: To skip to the next song.
  - Press **: To go back to the beginning of the current or previous song.
- When listening to a USB flash drive
  - Press and hold **: To skip to the next folder.
  - Press and hold **: To go back to the previous folder.