 


## Siri Eyes Free


You can talk to Siri using the  (Talk) button on the steering wheel when your iPhone is paired to the **Bluetooth**® HandsFreeLink® (HFL) system.

📖 **Phone Setup** P. 337

### ■ Using Siri Eyes Free

#### (Hang-up/back) Button

Press to deactivate Siri.

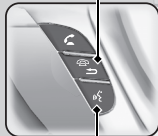


#### (Talk) Button

Press and hold until the display changes as shown.


 
#### Appears when Siri is activated in Siri Eyes Free



While in Siri Eyes Free:  
The display remains the same.  
No feedback or commands appears.

#### ☒ Siri Eyes Free

Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri Eyes Free while operating a vehicle.

#### ☒ Using Siri Eyes Free

Some commands work only on specific phone features or apps.