Honda Sensing®

Honda Sensing® is a driver support system which employs the use of two distinctly different kinds of sensors: a radar sensor located inside the front grille and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

Honda Sensing® has following functions.


■ The functions which do not require switch operations to activate

- Collision Mitigation Braking System™ (CMBS™) ≥ P. 512
- Road Departure Mitigation (RDM) System ▶ P. 548
- Traffic Sign Recognition System ▶ P. 553

■ The functions which require switch operations to activate

- Adaptive Cruise Control (ACC) with Low Speed Follow ₽ P. 523
- Lane Keeping Assist System (LKAS) ₽ P. 539

Operation Switches for the ACC with Low Speed Follow/ LKAS

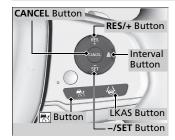

■ Button

Press to activate standby mode for ACC with Low Speed Follow. Or press to cancel the system.

■ LKAS Button

Press to activate standby mode for LKAS. Or press to cancel this system.

■ RES/+ and -/SET Buttons

Press **RES/+** button to resume the ACC with Low Speed Follow or increase the vehicle speed.

Press **–/SET** button to set the ACC with Low Speed Follow or decrease the vehicle speed.


■ Interval Button

Press to change the ACC with Low Speed Follow following-interval.

■ CANCEL Button

Press to cancel ACC with Low Speed Follow.

■ Driver Information Interface Content

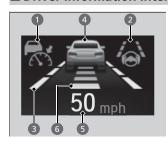

You can see the current state of ACC with Low Speed Follow, and LKAS.

- Indicates that ACC with Low Speed Follow is ready to be activated.
- White: The system is in standby.Green: The system is on.
- Amber: There is a problem with the system.
- 2 Indicates that LKAS is ready to be activated.
- White: The system is in standby.
- Green: The system is on.
- Amber: There is a problem with the system.
- 3 Indicates that LKAS is activated and whether or not traffic lane lines are detected.
- Solid line: The system is on.
- Lane outline: The system is in standby.
- Indicates whether or not ACC with Low Speed Follow detects the vehicle ahead.
- **5** Shows vehicle set speed in ACC with Low Speed Follow.
- **6** Shows set vehicle interval in ACC with Low Speed Follow.