


Rear Seats

Separately raise or lower the left and right rear-seat cushions to make room for luggage.


■ Fold Up the Rear Seats

1. To raise the driver's side rear seat, store the armrest in the seatback.
2. Pull and hold the release handle. *If the handle is difficult to move, release the handle, push on the seat cushion until the seat leg is secure in the floor guide, then try again.*
3. Lift the seat cushion until the legs disengage from the floor guide.
4. Release the handle.
5. Raise the cushion, pushing it firmly against the seat back until it locks.

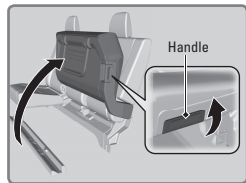

■ Folding Down the Rear Seats

1. Hold the folded seat cushion.
2. Pull the release handle until the cushion unlocks.
3. Hold the cushion as you slowly lower it.
4. Set the seat leg in the floor guide.
5. Push on the cushion to ensure the legs engage the floor guide.

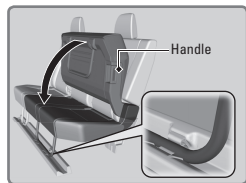

The seat leg is not designed to lock or latch in the floor guide. The seat lock is located in the seat hinge.