


### Front Seat Heaters\*<sup>1</sup> and Ventilation\*<sup>1</sup>

Press the seat heater\*<sup>1</sup> or the seat ventilation\*<sup>1</sup> button to cycle through settings. The appropriate indicator (red for heat, blue for ventilation) appears for each setting.

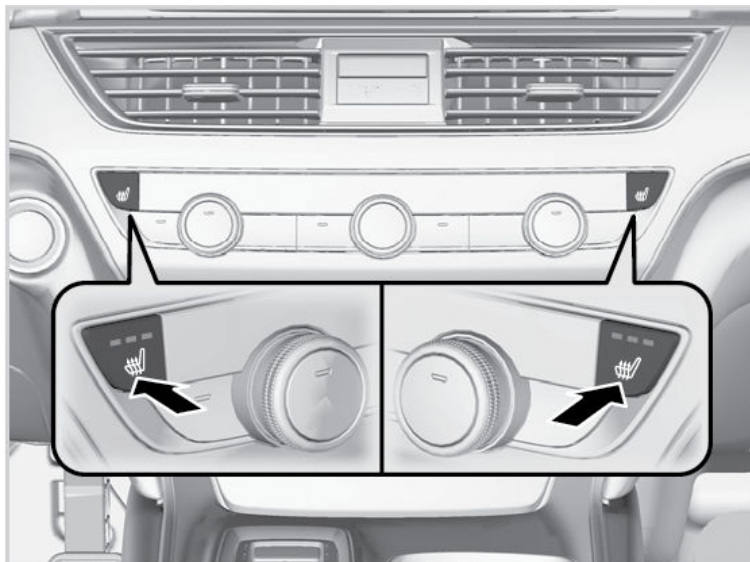

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)

*\*1 - If equipped*

- Four times - The OFF setting (no indicators on)

** WARNING**

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.