


## Rear Seats


### ■ Folding Up the Rear Seat

The right and left cushions can be raised independently to make room for cargo.

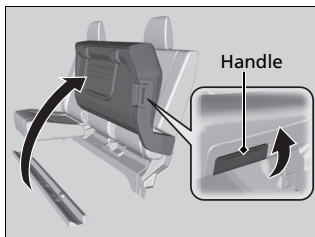

#### ■ Folding up the rear seat

1. Raise the armrest if it is lowered.
2. Pull the handle and lift up the seat cushion.
3. Release the handle and push the seat cushion firmly against the back support to lock it into place.
  - ▶ The seat leg automatically retracts as the cushion is raised.

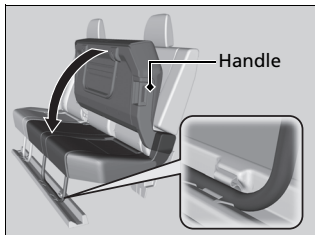

#### ■ Unfolding the rear seat

1. Hold the seat in its upright position and pull the handle.
  - ▶ The seat cushion will abruptly drop under its own weight if you do not support it.
2. Slowly lower the cushion until the leg is resting in the floor guide and the cushion is locked into place.
  - ▶ The seat leg automatically extends out as the cushion is lowered.

### ▣ Folding Up the Rear Seat

The seat cushion is locked with a mechanism inside the seat.

When the seat is locked, it can not be completely lifted up from the floor without pulling the handle. However, the seat cushion may move up from the floor slightly which is normal. If the seat is in this position, push the seat cushion down before pulling the handle to raise the seat.

Check to make sure there is nothing in the way of the seat cushion or leg before lowering the seat.

The right and left cushions can be raised together or separately to accommodate passengers and cargo.